

Lò vi sóng

Hướng dẫn sử dụng và hướng dẫn nấu ăn

**Planet
First** **100%
Recycled Paper**

Hướng dẫn này được thực hiện với 100 % giấy tái chế.

khởi dậy những tiềm năng

Cám ơn quý vị đã mua sản phẩm này của Samsung.
Vui lòng đăng ký sản phẩm tại địa chỉ web

www.samsung.com/register

SAMSUNG

NỘI DUNG

Hướng dẫn sử dụng “nhANH” lò vi sóng	2
Lò.....	3
Bảng điều khiển.....	4
Phụ kiện.....	4
Sử dụng sách hướng dẫn này.....	5
Thông tin an toàn quan trọng	5
Phản chủ thích cho các hình vẽ và biểu tượng.....	5
Phải thận trọng tránh tiếp xúc với năng lượng vi sóng quá mạnh.....	5
Các chỉ dẫn an toàn quan trọng	6
Lắp đặt lò vi sóng	9
Cài đặt thời gian	9
Làm gì khi nghi ngờ hoặc chắc chắn lò vi sóng bị hư hỏng	10
Nấu nướng/Hâm nóng.....	10
Mức công suất.....	11
Điều chỉnh thời gian nấu.....	11
Ngừng nấu.....	11
Đặt chế độ tiết kiệm điện	11
Sử dụng chức năng vệ sinh bằng hơi nước	12
Sử dụng chức năng hâm nóng/Nấu nướng tự động.....	12
Cài đặt hâm nóng/nấu nướng tự động.....	13
Sử dụng chức năng rã đông tự động.....	13
Cài đặt chức năng rã đông tự động.....	14
Sử dụng chức năng nấu có cảm biến	14
Cài đặt Nấu có cảm biến	15
Sử dụng chức năng rán tự động	17
Cài đặt rán tự động.....	17
Sử dụng chức năng rán thủ công.....	18
Cài đặt rán thủ công	18
Chọn vị trí đặt thiết bị đun nóng.....	19
Chọn phụ kiện	19
Nướng	20
Kết hợp vi sóng và nướng.....	20
Tắt tiếng kêu bíp.....	21
Khóa an toàn cho lò vi sóng	21
Hướng dẫn về dụng cụ nấu.....	21
Hướng dẫn nấu	22
Vệ sinh lò vi sóng	31
Bảo quản và sửa chữa lò vi sóng.....	31
Các thông số kỹ thuật.....	32

HƯỚNG DẪN SỬ DỤNG “NHANH” LÒ VI SÓNG

Nếu quý vị muốn nấu thực phẩm.

- Đặt thực phẩm vào lò.
Chọn mức nguồn bằng cách nhấn nút  một hoặc nhiều lần.



- Chọn thời gian nấu bằng cách nhấn nút (—) và (+) theo yêu cầu.



- Nhấn nút .

Kết quả : Bắt đầu nấu. Sau khi kết thúc, lò sẽ kêu bíp 4 lần.



Nếu quý vị muốn rã đông thực phẩm nhanh và tự động.

- Đặt thực phẩm đông vào lò.
Chọn loại thực phẩm mà quý vị muốn rã đông bằng cách nhấn nút **Power Defrost (Rã đông)** () một hoặc nhiều lần.



- Chọn khối lượng thực phẩm bằng cách nhấn các nút (—) và (+).




- Nhấn nút .



Nếu quý vị muốn tăng thêm thời gian nấu mỗi lần 30 giây.

Để nguyên thực phẩm trong lò.
Nhấn nút **+30s (30 giây)** một hoặc nhiều lần để nấu thêm mỗi 30 giây như mong muốn.




Nếu quý vị muốn nướng thực phẩm.


1. Nhấn nút .




2. Đặt thời gian nấu bằng cách nhấn các nút (—) và (+).



3. Nhấn nút .




LÒ

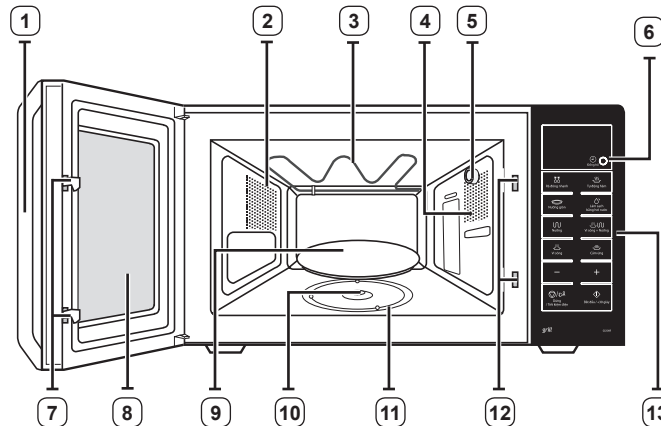

- | | |
|--------------------------|---------------------|
| 1. TAY NẮM CỬA | 8. CỬA LÒ |
| 2. LỖ THÔNG HƠI | 9. ĐĨA XOAY |
| 3. NƯỚNG | 10. ĐẾ XOAY |
| 4. ĐÈN | 11. VÒNG XOAY |
| 5. VÒNG KẸP GIỮ BÁT NƯỚC | 12. LỖ KHÓA AN TOÀN |
| 6. MÀN HÌNH | 13. BẢNG ĐIỀU KHIỂN |
| 7. THEN CỬA | |

TIẾNG VIỆT

BẢNG ĐIỀU KHIỂN

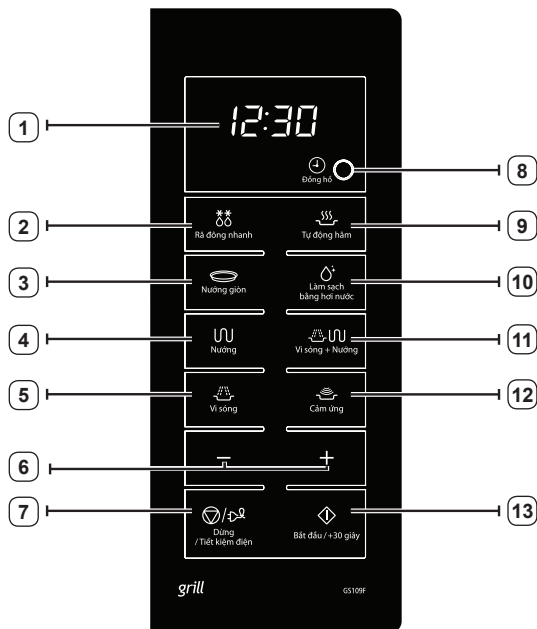


1. MÀN HÌNH
2. NÚT CHỨC NĂNG RÃ ĐÔNG TỰ ĐỘNG
3. CHỌN CHỨC NĂNG RÁN TỰ ĐỘNG
4. CHỌN CHẾ ĐỘ NƯỚNG
5. CHỌN CHẾ ĐỘ VI SÓNG/ MỨC CÔNG SUẤT
6. NÚT TĂNG (+) / GIẢM (—)
(Thời gian nấu, trọng lượng và lượng dùng)
7. NÚT NGỪNG/TIẾT KIỆM ĐIỆN
8. CÀI ĐẶT ĐỒNG HỒ
9. CHỌN CHỨC NĂNG TỰ HÂM NÓNG
10. NÚT LÀM SẠCH BẰNG HƠI NƯỚC
11. CHỌN CHẾ ĐỘ KẾT HỢP
12. CHỌN CHẾ ĐỘ NẤU CÓ CẢM BIẾN
13. NÚT BẮT ĐẦU

PHỤ KIỆN

Tùy theo kiểu lò mà quý vị đã mua, quý vị sẽ được cung cấp một số phụ kiện có thể sử dụng theo nhiều cách khác nhau.


1. **Đế xoay**, đặt sẵn trên trục động cơ giữa lò.

Mục đích: Đế xoay làm quay đĩa xoay.




2. **Vòng xoay**, được đặt ở giữa tâm lò.

Mục đích: Vòng xoay nâng đỡ đĩa xoay.




3. **Đĩa xoay**, được đặt trên vòng xoay với tâm đặt khớp với đế xoay.

Mục đích: Đĩa xoay là bề mặt nấu chính; có thể tháo gỡ dễ dàng để làm vệ sinh.




4. **Rế nướng**, được đặt trên đĩa xoay.

Mục đích: Rế kim loại có thể được sử dụng ở chế độ nướng và nấu kết hợp.




5. **Đĩa chống dính**, vui lòng xem từ trang 17 đến trang 18.

Mục đích: Đĩa chống dính khi sử dụng chức năng rán tự động hoặc rán thủ công.



6. **Bát nước dùng để vệ sinh lò**, vui lòng xem trang 12.

Mục đích: Bát nước được dùng để làm sạch bằng hơi nước.



KHÔNG ĐƯỢC vận hành lò vi sóng khi không có vòng xoay và đĩa xoay.

SỬ DỤNG SÁCH HƯỚNG DẪN NÀY

Quý vị vừa mua một lò vi sóng SAMSUNG mới. Sách hướng dẫn sử dụng của quý vị cung cấp nhiều thông tin giá trị cho công việc nấu nướng bằng lò vi sóng.

- Các lưu ý an toàn
- Phụ kiện và dụng cụ nấu phù hợp
- Những lời khuyên hữu ích khi nấu nướng
- Những lời khuyên cho việc nấu nướng

THÔNG TIN AN TOÀN QUAN TRỌNG

HƯỚNG DẪN AN TOÀN QUAN TRỌNG

ĐỌC KỸ TRƯỚC KHI DÙNG VÀ GIỮ LẠI ĐỂ THAM KHẢO VỀ SAU.

Trước khi sử dụng lò, quý vị phải bảo đảm làm theo đúng những hướng dẫn sau đây.

- Chỉ sử dụng thiết bị theo đúng mục đích sử dụng dự định được mô tả trong tài liệu hướng dẫn sử dụng này. Những cảnh báo và hướng dẫn an toàn quan trọng trong tài liệu hướng dẫn sử dụng này không đảm bảo đề cập đến mọi hoàn cảnh và tình huống có thể xảy ra. Quý vị có trách nhiệm vận dụng lý trí và sự cẩn trọng của bản thân khi lắp đặt, bảo dưỡng, và vận hành thiết bị.
- Vì những hướng dẫn vận hành sau đây đề cập đến nhiều mẫu sản phẩm khác nhau, những tính năng của lò vi sóng của quý vị có thể khác biệt đôi chút so với phần mô tả trong tài liệu hướng dẫn sử dụng này và không phải tất cả các cảnh báo đều có thể áp dụng. Nếu quý vị có bất kỳ câu hỏi hoặc mối quan ngại nào, xin vui lòng liên hệ với trung tâm dịch vụ khách hàng gần nhất hoặc tìm sự hỗ trợ và thông tin trực tuyến tại trang web: www.samsung.com.
- Lò vi sóng này có hỗ trợ hâm nóng thực phẩm. Lò chỉ dành cho sử dụng trong gia đình. Không được nung nóng bất cứ loại vải hoặc nệm nào có cấu trúc dạng sợi, vì có thể gây phỏng và hỏa hoạn. Nhà sản xuất không chịu trách nhiệm về những thiệt hại do việc sử dụng thiết bị không đúng cách gây ra.
- Không giữ lò sạch sẽ có thể dẫn đến biến chất bề mặt và gây ảnh hưởng không tốt đến tuổi thọ của thiết bị và còn có thể gây nguy hiểm.

PHẦN CHÚ THÍCH CHO CÁC HÌNH VẼ VÀ BIỂU TƯỢNG



CẢNH BÁO

Tai nạn hoặc hành động thiếu an toàn có thể gây **thương tổn nghiêm trọng hoặc gây chết người**.



KHUYẾN CÁO

Tai nạn hoặc hành động thiếu an toàn có thể gây **thương tổn nhẹ cho người hoặc thiệt hại về tài sản**.



Cảnh báo; Nguy cơ hỏa hoạn



Cảnh báo; Bề mặt nóng



Cảnh báo; Có điện



Cảnh báo; Vật liệu dễ nổ



KHÔNG ĐƯỢC thử.



Tuân thủ nghiêm ngặt các hướng dẫn.



KHÔNG ĐƯỢC tháo rời.



Rút phích cắm ra khỏi ổ điện trên tường.



KHÔNG ĐƯỢC chạm vào.



Đảm bảo bếp được nối đất để tránh bị điện giật.



Gọi điện đến trung tâm dịch vụ khách hàng để được giúp đỡ.



Lưu ý



Quan trọng

PHẢI THẬN TRỌNG TRÁNH TIẾP XÚC VỚI NĂNG LƯỢNG VI SÓNG QUÁ MẠNH.

Không tuân thủ các lưu ý an toàn sau đây có thể khiến quý vị bị phơi nhiễm trước năng lượng vi sóng có hại.

- (a) Trong mọi trường hợp, không được tìm cách nấu khi cửa lò đang mở, phá khóa an toàn (chốt cửa) hoặc nhét bất cứ vật gì vào các lỗ khóa an toàn.
- (b) **KHÔNG ĐƯỢC** đặt bất kỳ vật gì giữa cửa lò và mặt đệm phía trước hoặc để cho thực phẩm hay vụn thức ăn khi lau chùi bám vào vành đệm cửa. Luôn lau chùi sạch sẽ cửa lò và đệm cửa lò bằng khăn ướt trước sau đó lau lại bằng khăn mềm khô.

- (c) Nếu lò bị hư hỏng, Không ĐƯỢC sử dụng lò cho đến khi có nhân viên kỹ thuật đủ trình độ chuyên môn do nhà sản xuất huấn luyện đến sửa chữa. Điều cực kỳ quan trọng là phải đảm bảo cửa lò luôn đóng kín và các bộ phận sau đây không bị hư hỏng:

- (1) cửa (vành)
- (2) bản lề cửa (gãy hoặc lỏng)
- (3) Đệm cửa và bề mặt tiếp xúc

- (d) Ngoại trừ nhân viên kỹ thuật có chuyên môn đã được nhà sản xuất huấn luyện, không ai được sửa chữa hoặc điều chỉnh lò.

Sản phẩm này là một thiết bị ISM nhóm 2 lớp B. Định nghĩa của nhóm 2 bao gồm tất cả các thiết bị ISM có phát sinh năng lượng tần số vô tuyến và/hoặc sử dụng năng lượng này dưới hình thức tia bức xạ điện từ dùng trong xử lý vật liệu, thiết bị EDM và hàn hồ quang. Lớp B là những thiết bị phù hợp để sử dụng theo các tiêu chuẩn dân dụng và các tiêu chuẩn nối trực tiếp với lưới điện hạ thế cung cấp năng lượng cho các tòa nhà vì mục đích dân dụng.

CÁC CHỈ DẪN AN TOÀN QUAN TRỌNG

Phải bảo đảm là quý vị luôn luôn tuân thủ những chỉ dẫn an toàn này.

 CẢNH BÁO				
 Chỉ có nhân viên chuyên môn mới được phép chỉnh sửa hoặc sửa chữa lò vi sóng.	✓	✓	✓	✓
 Không được nấu các chất lỏng và thực phẩm khác đựng trong hộp kín.	✓	✓	✓	✓
 Vì sự an toàn của quý vị, không được sử dụng các dụng cụ làm vệ sinh bằng nước cao áp hoặc hơi nước.	✓	✓	✓	✓
 Không được lắp đặt thiết bị này; gần lò sưởi, chất liệu dễ cháy; ở nơi ẩm thấp, trơn trượt hoặc nhiều bụi, ở nơi có ánh nắng chiếu vào trực tiếp, có nước chảy hoặc có khả năng bị rò rỉ khí đốt; trên mặt sàn không cân bằng.	✓	✓	✓	✓
 Thiết bị này phải được nối đất theo đúng luật của địa phương và của quốc gia.	✓	✓	✓	✓

 Thường xuyên lau sạch tất cả những dị vật ngoại lai như bụi bặm hoặc nước bám trên phích cắm và các tiếp điểm bằng một mảnh vải khô.	✓	✓	✓	✓
 Không được kéo hoặc gấp dây điện quá mức.	✓	✓	✓	✓
 Trong trường hợp rò rỉ khí đốt (ví dụ như khí propane, khí LP, v.v...), quý vị phải lập tức thông gió cho toàn bộ khu vực và không chạm vào phích cắm.	✓	✓	✓	✓
 Không được chạm vào phích cắm khi tay ướt.	✓	✓	✓	✓
 Không được tắt thiết bị bằng cách rút phích cắm ra khỏi ổ điện trong khi đang vận hành.	✓	✓	✓	✓
 Không được nhét ngón tay hoặc các dị vật ngoại lai vào. Nếu bất kỳ dị vật ngoại lai nào như nước chảy vào thiết bị, hãy rút phích cắm ra khỏi ổ điện và liên hệ với trung tâm dịch vụ khách hàng gần nhất.	✓	✓	✓	✓
 Không được để thiết bị bị đè nén hoặc va đập quá mức.	✓	✓	✓	✓
 Không được đặt lò lên trên các đồ vật mỏng manh như chậu rửa bát hoặc đồ thủy tinh. (Chỉ dành cho mẫu để bàn)	✓	✓		
 Không được dùng benzen, dung môi, rượu, máy thổi hơi nước hoặc máy thổi cao áp để vệ sinh thiết bị này.	✓	✓	✓	✓
 Bảo đảm là điện áp, tần suất và dòng điện giống như trong các đặc điểm kỹ thuật của sản phẩm.	✓	✓		✓
 Cắm chặt phích cắm vào ổ điện trên tường. Không được dùng bộ chuyển nhiều đầu, dây nối hoặc bộ biến điện.	✓	✓	✓	
 Không được treo dây điện trên vật thể bằng kim loại, nhét dây điện vào giữa các đồ vật và sau lưng lò.	✓	✓	✓	
 Không được sử dụng phích cắm đã hỏng, dây điện đã hỏng hoặc ổ điện trên tường có lỗ cắm bị lớn. Nếu phích cắm hoặc dây điện bị hư hỏng, hãy liên lạc với trung tâm dịch vụ khách hàng gần nhất.	✓	✓	✓	✓
 Thiết bị không được dự định vận hành bằng các phương tiện như bộ định giờ ngoại vi hoặc hệ thống điều khiển từ xa rời.	✓	✓		

☐	Không được rót hoặc xịt nước trực tiếp lên lò.	✓	✓		
☐	Không được để đồ vật lên trên lò, bên trong hoặc trên cửa lò.	✓	✓	✓	
☐	Không được xịt các hóa chất dễ bay hơi như thuốc diệt côn trùng lên bề mặt lò.	✓	✓		
★	Phải giám sát trẻ em để đảm bảo rằng trẻ không nghịch phá thiết bị	✓	✓	✓	✓
☐	Thiết bị này không được dự định để lắp đặt trong các phương tiện giao thông đường bộ, nhà lưu động hoặc những phương tiện giao thông tương tự.	✓	✓	✓	✓
☐	Không được để những vật liệu dễ cháy bên trong lò. Đặc biệt cần trọng khi hâm thực phẩm hoặc nước uống có rượu vì hơi rượu có thể tiếp xúc với phần nóng của lò.	✓		✓	✓
☐	Lò vi sóng chỉ được dự định để sử dụng trên mặt bếp hoặc trong không gian mở; không nên sử dụng lò vi sóng đặt trong tủ hoặc không gian kín. (Chỉ dành cho mẫu để bàn)	✓	✓	✓	✓
★	CẢNH BÁO: Thiết bị và các bộ phận mà quý vị có thể tiếp xúc sẽ nóng lên trong khi sử dụng. Phải cẩn thận tránh chạm vào bộ cấp nhiệt bên trong bếp. Trẻ em nhỏ hơn 8 tuổi không được đến gần lò trừ khi được người lớn giám sát liên tục.	✓	✓	✓	✓
★	CẢNH BÁO: Chỉ cho phép trẻ em sử dụng lò mà không cần người lớn giám sát khi đã cung cấp những hướng dẫn đầy đủ để trẻ có thể sử dụng lò một cách an toàn và hiểu rõ những nguy cơ có thể xảy ra nếu sử dụng không đúng cách.	✓	✓	✓	✓
★	Trẻ em từ 8 tuổi trở lên và những người bị khuyết về thể chất, cảm giác hoặc tâm thần hoặc thiếu kinh nghiệm có thể sử dụng thiết bị này nếu họ được giám sát hoặc hướng dẫn về cách sử dụng thiết bị an toàn và hiểu rõ những nguy cơ có thể gặp phải. Không được để trẻ em chơi với thiết bị này. Không được để trẻ em vệ sinh hoặc bảo trì cho lò mà không có sự giám sát của người lớn.	✓	✓	✓	✓

☐	CẢNH BÁO: Nếu cửa lò hoặc đệm cửa lò bị hư hỏng, phải ngừng vận hành lò cho đến khi lò được người có đủ trình độ chuyên môn sửa chữa.	✓	✓	✓	✓
☐	CẢNH BÁO: Sẽ rất nguy hiểm nếu một người không có trình độ chuyên môn phù hợp sửa chữa hoặc bảo trì lò trong đó đòi hỏi tháo gỡ lớp vỏ bọc có chức năng bảo vệ tránh tiếp xúc với năng lượng vi sóng.	✓	✓	✓	✓
☐	CẢNH BÁO: Đảm bảo là thiết bị đã được tắt điện trước khi thay bóng đèn nhằm tránh nguy cơ điện giật.	✓	✓	✓	
☐	CẢNH BÁO: Không được hâm nóng chất lỏng và các thực phẩm khác trong hộp đựng kín vì nguy cơ gây nổ.	✓		✓	✓
☐	CẢNH BÁO: Các bộ phận mà người sử dụng có thể tiếp xúc có thể sẽ bị nóng lên trong quá trình sử dụng. Giữ trẻ nhỏ cách xa lò để tránh bị bỏng.	✓		✓	
★	CẢNH BÁO: Sử dụng vi sóng để hâm nóng thức uống có thể gây ra hiện tượng sôi trào chậm, vì vậy cần phải thận trọng khi mở lon hoặc hộp; Để phòng ngừa trường hợp này, hãy LUÔN LUÔN chờ tối thiểu 20 giây sau khi lò tắt để nhiệt độ tự cân bằng. Khuấy đều trong khi hâm nóng, nếu cần, và LUÔN LUÔN khuấy sau khi hâm nóng. Trong trường hợp bị bỏng hơi nước, hãy làm theo các hướng dẫn SƠ CỨU sau đây: - Ngâm vùng bị bỏng trong nước lạnh tối thiểu 10 phút. - Đắp vùng bị bỏng bằng vải sạch và khô. - Không được xoa kem, dầu hoặc nước rửa.	✓	✓	✓	✓
★	Thiết bị sẽ nóng lên trong quá trình sử dụng. Phải cẩn thận tránh chạm vào bộ cấp nhiệt bên trong lò.	✓		✓	✓
★	CẢNH BÁO: Phải khuấy hoặc lắc đều và kiểm tra nhiệt độ sữa hoặc thực phẩm trong bình dành cho trẻ em trước khi cho trẻ ăn để tránh bị bỏng.			✓	
★	Thiết bị này không dành cho những người (bao gồm trẻ em) dị tật, thiếu năng trí tuệ hoặc thiếu kinh nghiệm và kiến thức sử dụng, trừ khi được người chịu trách nhiệm về sự an toàn của họ giám sát và hướng dẫn.	✓	✓	✓	✓
★	Phải đặt lò này theo đúng hướng và ở đúng độ cao để có thể dễ dàng ra vào và kiểm soát khu vực.	✓	✓	✓	✓

★	Trước khi sử dụng lần đầu, quý vị nên bật cho lò nấu nước trong 10 phút và sau đó hãy sử dụng.	✓	✓	✓	✓
★	Đặt lò sao cho việc cắm phích điện được dễ dàng. Nếu lò phát ra tiếng động lạ, bốc mùi khét, hoặc bốc khói, hãy lập tức rút phích cắm ra khỏi ổ điện và liên hệ với trung tâm dịch vụ khách hàng gần nhất.	✓	✓	✓	✓
☐	Trong khi vệ sinh lò, các bề mặt có thể nóng hơn bình thường và không nên cho trẻ em đến gần. (Chỉ dành cho mẫu làm vệ sinh được)	✓	✓		
☐	Chất chảy tràn quá nhiều phải được dọn dẹp trước khi vệ sinh và những dụng cụ nào mà sách hướng dẫn vệ sinh nói là có thể để lại bên trong lò trong khi vệ sinh. (Chỉ dành cho mẫu làm vệ sinh được)	✓	✓	✓	✓
★	Thiết bị phải cho phép ngắt điện thiết bị sau khi lắp đặt. Việc này có thể thực hiện bằng cách để lò phích cắm điện hoặc gắn thêm công tắc lên dây điện cố định theo đúng các quy định về dây điện. (Chỉ dành cho mẫu gắn sẵn.)	✓	✓	✓	✓


⚠ KHUYẾN CÁO    					
★	Chỉ sử dụng những dụng cụ thích hợp với lò vi sóng; KHÔNG ĐƯỢC sử dụng bất cứ hộp đựng nào bằng kim loại, Bát đĩa có viền vàng hoặc bạc, Que xiên, nĩa, v.v. Tháo bỏ các dây kim loại cột miệng túi giấy hoặc túi nhựa. Lý do: Hồ quang hoặc tia lửa điện phát sinh có thể làm hỏng lò.	✓		✓	✓
★	Khi hâm nóng thực phẩm trong túi giấy hoặc túi nhựa, phải thường xuyên theo dõi lò vì nguy cơ phát hỏa;	✓		✓	
☐	Không được sử dụng lò vi sóng để sấy khô giấy tờ hoặc quần áo.	✓		✓	✓
★	Nấu trong thời gian ngắn cho số lượng thực phẩm ít để tránh làm cho thực phẩm bị quá nóng và khét.	✓		✓	✓
☞	Nếu phát hiện có khói bốc lên, hãy tắt công tắc hoặc rút phích cắm điện và giữ nắp thiết bị đóng để dập tắt lửa;	✓		✓	✓

★	Thường xuyên vệ sinh lò và lau sạch các mảng bám thực phẩm bên trong lò;	✓	✓		✓
☐	Không được nhúng cáp điện hoặc phích cắm vào nước và giữ cáp điện cách xa các nguồn nhiệt.	✓	✓		
☐	Không được hâm nóng trứng còn nguyên vỏ và trứng luộc sơ bằng lò vi sóng vì trứng có thể bị nổ, ngay cả khi việc hâm nóng đã kết thúc; Ngoài ra không được hâm nóng các chai, lọ, hộp kín hoặc được hút chân không, hạt còn nguyên vỏ, cà chua, v.v.			✓	✓
☐	Không được bật kín các khe thông hơi bằng vải hoặc giấy. Nó có thể gây cháy do hơi nóng phát ra từ trong lò. Cũng có thể là lò bị nóng quá và đã tự động tắt, và sẽ không bật lên lại cho đến khi nguội hẳn.	✓		✓	
☞	Luôn luôn sử dụng găng tay khi lấy thực phẩm ra khỏi lò để tránh bị phỏng.			✓	
☞	Không được chạm vào các bộ phận cấp nhiệt hoặc thành bên trong lò cho đến khi lò nguội hoàn toàn.			✓	
★	Khuấy các chất lỏng sau khi hâm nóng được một nửa thời gian hoặc sau khi hâm xong và để nguội trong tối thiểu là 20 giây để tránh bị trào ra.			✓	
★	Hãy đứng cách lò khoảng một sải tay khi mở cửa để tránh bị phỏng do hơi nóng hoặc hơi nước nóng thoát ra.			✓	
☐	Không được vận hành lò vi sóng khi không có thực phẩm bên trong. Lò vi sóng sẽ tự động tắt sau 30 phút không hoạt động vì mục đích an toàn. Chúng tôi khuyến nghị luôn luôn đặt một ly nước bên trong lò để hấp thu năng lượng vi sóng trong trường hợp lò vô tình được bật lên.	✓			✓
☐	Không được sử dụng giẻ lau thô ráp hoặc bụi nhùi kim loại để lau chùi cửa kính của lò vì chúng có thể làm trầy xước bề mặt, có thể dẫn đến vỡ kính.	✓			✓
★	Phải lắp đặt lò theo đúng các quy lý thông thoáng được ghi trong sách hướng dẫn này (xem phần Lắp đặt lò vi sóng)	✓		✓	
★	Hãy cẩn thận khi nối những thiết bị điện khác với các ổ điện gần thiết bị.	✓	✓	✓	


LẮP ĐẶT LÒ VI SÓNG

Đặt lò trên một bề mặt bằng phẳng cao hơn sàn nhà 85 cm. Bề mặt đó phải đủ vững chắc để chịu được trọng lượng của lò.

1. Khi lắp đặt lò, đảm bảo đủ thông hơi cho lò bằng cách chừa ít nhất 10 cm (4 inch) phía sau và hai bên lò và 20 cm (8 inch) phía trên lò.

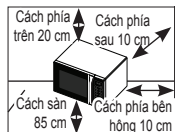

2. Lấy tất cả những miếng đệm bên trong lò khi đóng gói ra khỏi lò. Lắp vòng xoay và đĩa xoay. Kiểm tra để xác định đĩa xoay có thể xoay tự do.

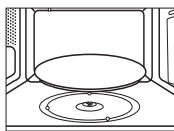

3. Đặt lò sao cho việc cắm phích điện được dễ dàng.

- Nếu cáp nguồn bị hư hỏng, phải thay thế bằng loại cáp chuyên dụng hoặc hệ cáp của nhà sản xuất hoặc đại lý phân phối. Để đảm bảo an toàn điện, sử dụng ổ cắm 3 chân, 230 V, 50 Hz, AC có nối đất. Nếu cáp điện của thiết bị này bị hư hỏng, nó phải được thay thế mới bằng một sợi cáp chuyên dụng.

- Không lắp đặt lò trong không gian quá nóng hoặc ẩm thấp như quá gần lò nấu truyền thống hay lò sưởi. Phải tuân thủ quy định về nguồn cấp điện và cáp nối dài nguồn phải cùng tiêu chuẩn với cáp được cung cấp kèm theo lò. Lau sạch bên trong lò và cửa lò bằng khăn ướt trước khi sử dụng lò lần đầu.

CÀI ĐẶT THỜI GIAN

Lò có một đồng hồ gắn sẵn. Khi được cấp điện, “:0”, “88:88” hoặc “12:00” sẽ tự động hiển thị trên màn hình.

Vui lòng cài đặt giờ hiện tại. Thời gian có thể được hiển thị theo chế độ 24 giờ hay 12 giờ. Quý vị phải cài đặt giờ cho đồng hồ:

- Khi lắp đặt lò lần đầu
- Sau một sự cố mất điện

- Không được quên cài đặt lại giờ cho đồng hồ khi chuyển từ giờ mùa hè sang giờ mùa đông và ngược lại.

1. Để hiển thị thời gian ở...

Chế độ 24 giờ
Chế độ 12 giờ

Sau đó nhấn nút

⌚ ...

Một lần
Hai lần




2. Nhấn các nút (—) và (+) để cài đặt giờ.



3. Nhấn nút ⌚.



4. Nhấn các nút (—) và (+) để cài đặt phút.



5. Nhấn nút ⌚.



LÀM GÌ KHI NGHI NGỜ HOẶC CHẮC CHẮN LÒ VI SÓNG BỊ HƯ HỎNG

Nếu quý vị gặp các vấn đề dưới đây, hãy cố gắng tự giải quyết để tiết kiệm được thời gian.

Điều này là bình thường.

- Ngưng tụ hơi nước trong lò
- Không khí đối lưu quanh cửa và vỏ ngoài của lò
- Ánh sáng phản chiếu quanh cửa và vỏ ngoài của lò
- Hơi nước thoát ra từ khu vực quanh cửa lò hoặc các lỗ thông hơi

Lò không khởi động khi quý vị đã nhấn nút .

- Cửa lò đã đóng hoàn toàn hay chưa?

Thực phẩm hoàn toàn chưa được nấu

- Quý vị đã cài đặt thời gian đúng và/hoặc đã nhấn nút chưa .
- Cửa lò đã đóng chưa?
- Mạng điện đã quá tải và cháy cầu chì hay nhảy cầu dao?

Thực phẩm được nấu quá chín hoặc quá sũng

- Quý vị đã cài đặt đủ thời gian nấu cho loại thực phẩm đó hay chưa?
- Mức công suất lựa chọn đã phù hợp hay chưa?

Có tia lửa điện hay tiếng lách tách bên trong lò (hở quang điện)

- Quý vị có sử dụng đĩa được trang trí bằng kim loại không?
- Có phải quý vị đã để quên muỗng nĩa hoặc một dụng cụ khác bằng kim loại bên trong lò?
- Có phải giấy bọc thực phẩm bằng nhôm được đặt quá gần thành bên trong lò hay không?

Lò gây nhiễu sóng cho máy cát sét hoặc tivi

- Có thể có nhiễu tương đối nhỏ cho tivi hoặc máy cát sét khi lò hoạt động. Điều này là bình thường. Để khắc phục, cần đặt lò xa tivi, radio và ăng ten.
- Nếu bộ vi xử lý của lò phát hiện được nhiễu sóng, màn hình hiển thị có thể được khởi động lại. Để khắc phục, tháo phích cắm điện ra và cắm lại. Cài đặt lại thời gian.

-  Nếu những hướng dẫn trên đây không giúp quý vị khắc phục được hư hỏng, hãy liên hệ người bên hoặc dịch vụ hậu mãi SAMSUNG.

NẤU NƯỚNG/HÂM NÓNG

Quy trình sau đây giải thích cách nấu nướng hoặc hâm nóng thực phẩm. LUÔN LUÔN kiểm tra thông số cài đặt trước khi rời lò cho lò tự nấu. Trước hết, đặt thực phẩm vào giữa đĩa xoay. Sau đó, đóng cửa lò lại.

1. Nhấn nút .

Kết quả : 900 W (mức công suất tối đa)

được hiển thị:

Chọn mức công suất phù hợp bằng cách nhấn nút  nhiều lần cho đến khi mức công suất tương ứng được hiển thị. Hãy tham khảo thêm bảng các mức công suất.



2. Chọn thời gian nấu bằng cách nhấn nút (—) và (+) theo yêu cầu.



3. Nhấn nút .

Kết quả : Đèn lò sẽ sáng khi đĩa xoay bắt đầu xoay.

- 1) Bắt đầu nấu và sau khi kết thúc lò sẽ kêu bíp 4 lần.
- 2) Tín hiệu nhắc nhở sẽ kêu 3 lần (mỗi phút một lần).
- 3) Giờ hiện hành sẽ được hiển thị lại.



-  **Không bao giờ** được vận hành lò khi lò để trống.

-  Nếu quý vị muốn hâm nóng một đĩa thực phẩm trong thời gian ngắn với mức công suất tối đa (900 W), quý vị chỉ cần nhấn nút **+30s (30 giây)** mỗi lần cho mỗi 30 giây thời gian nấu. Lò sẽ nấu ngay lập tức.

MỨC CÔNG SUẤT

Quý vị có thể chọn một trong các mức công suất sau.


Mức công suất	Công suất	
	LÒ VI SÓNG	NƯỚNG
CAO	900 W	-
CAO VỪA	600 W	-
VỪA	450 W	-
THẤP VỪA	300 W	-
RÃ ĐÔNG (解凍)	180 W	-
THẤP/GIỮ ẤM	100 W	-
NƯỚNG	-	1300 W
KẾT HỢP I (解冻+烧烤)	600 W	1300 W
KẾT HỢP II (解冻+烘烤)	450 W	1300 W
KẾT HỢP III (解冻+保温)	300 W	1300 W

- ☒ Nếu quý vị chọn mức công suất cao hơn, thời gian nấu sẽ giảm.
- ☒ Nếu quý vị chọn mức công suất thấp hơn, thời gian nấu sẽ được tăng lên.

ĐIỀU CHỈNH THỜI GIAN NẤU

Tăng thời gian nấu bằng cách nhấn nút +30s (30 giây) để kéo dài thêm 30 giây cho một lần nấu.

Nhấn nút **+30s (30 giây)** một lần cho mỗi 30 giây cộng thêm.




NGỪNG NẤU

Quý vị có thể dừng nấu bất kỳ lúc nào để kiểm tra thực phẩm.

- Để tắt tạm thời;
Hãy mở cửa.

Kết quả : Dừng nấu. Để nấu trở lại, quý vị đóng cửa lò và nhấn nút lần nữa.



- Để tắt hoàn toàn.
Nhấn nút .

Kết quả : Dừng nấu.



- Quý vị cũng có thể hủy bỏ bất kỳ thông số cài đặt nào trước khi bắt đầu nấu bằng cách nhấn nút **Stop (Dừng)** ().

ĐẶT CHẾ ĐỘ TIẾT KIỆM ĐIỆN

Lò có chế độ Tiết kiệm điện. Tính năng này giúp tiết kiệm điện khi không sử dụng lò.

- Nhấn nút **Energy save (Tiết kiệm điện)**.
- Để thoát khỏi chế độ tiết kiệm điện, hãy mở cửa lò và màn hình sẽ hiển thị "0". Lò đã sẵn sàng sử dụng.




SỬ DỤNG CHỨC NĂNG VỆ SINH BẰNG HƠI NƯỚC

Hơi nước từ hệ thống làm sạch của lò sẽ thấm ướt bề mặt khoang lò. Sau khi sử dụng chức năng này, quý vị sẽ dễ dàng lau chùi khoang lò.

-  Chỉ sử dụng chức năng này khi lò nguội hoàn toàn. (Nhiệt độ phòng)
-  Chỉ sử dụng nước sạch thông thường, không cần dùng nước lọc.


1. Mở cửa lò.



2. Đổ nước vào bát, đến ngang vạch mức nước bên ngoài bát. (Vạch này khoảng 50 ml).




3. Đặt bát nước vào vòng kẹp để bát nước phía trên ở bên phải của khoang lò.




4. Đóng cửa lò.


5. Nhấn nút **Steam Clean (Vệ sinh bằng hơi nước)** (⇩). Quý vị có thể thấy **sương mù** trong quá trình vệ sinh nhưng đây không phải là lỗi. **Tuy nhiên, hơi nước sẽ che mất ánh sáng của đèn bên trong lò.**



6. Mở cửa lò.



7. Lau sạch khoang lò bằng khăn khô. Nhấc đĩa xoay và rửa ra ngoài bằng giấy thấm.



Cảnh báo!

- Bát nước chỉ được sử dụng khi đang ở chế độ “**Steam Clean (Vệ sinh bằng hơi nước)**”.
- Khi nấu thực phẩm khô, phải lấy bát nước ra ngoài, vì nó sẽ gây hư hỏng và cháy lò.

SỬ DỤNG CHỨC NĂNG HÂM NÓNG/NẤU NƯỚNG TỰ ĐỘNG

Chức năng hâm nóng/Nấu nướng tự động có bốn mức thời gian nấu được cài đặt sẵn.

Quý vị không cần chọn cả thời gian nấu lẫn mức công suất. Quý vị có thể điều chỉnh lượng khẩu phần bằng cách nhấn nút (—) và (+).

Đầu tiên, hãy đặt thực phẩm ở giữa đĩa xoay và đóng cửa lò lại.

1. Chọn loại thực phẩm thích hợp bằng cách nhấn nút **Auto Reheat/Cook (Hâm nóng/Nấu nướng tự động)** (⇩) một hoặc nhiều lần.




2. Chọn lượng dùng bằng cách nhấn các nút (—) và (+). (Xem bảng kế bên).



3. Nhấn nút ⇩.

Kết quả : Bắt đầu nấu. Khi nấu xong.

- 1) Lò sẽ kêu bip bốn lần.
- 2) Tín hiệu nhắc nhở sẽ kêu 3 lần (mỗi phút một lần).
- 3) Giờ hiện hành sẽ được hiển thị lại.



-  Chỉ sử dụng vật chứa an toàn với vi sóng.

CÀI ĐẶT HÂM NÓNG/NẤU NƯỚNG TỰ ĐỘNG

Bảng sau đưa ra 4 chế độ Hâm nóng & Nấu nướng tự động, khối lượng, thời gian chờ và các khuyến cáo tương ứng khác nhau. Chế độ số 1 và 2 chỉ sử dụng với năng lượng vi sóng.

Chế độ số 3 và 4 sử dụng kết hợp vi sóng và nướng. Sử dụng gang tay khi lấy ra!

Mã thực phẩm/ Thực phẩm	Khẩu phần	Thời gian chờ (phút)	Khuyến nghị
1. Thực phẩm chế biến sẵn (giữ lạnh) 	300-350 g 400-450 g 500-550 g	3	Đặt lên đĩa gốm và đậy bằng giấy bóng dành cho lò vi sóng. Chế độ này phù hợp cho bữa ăn gồm 3 món (ví dụ thịt có nước sốt, rau và một món phụ như khoai tây, cơm hoặc mì ống).
2. Bắp rang 	100-150 g	-	Sử dụng loại bắp dùng trong lò vi sóng. Làm theo hướng dẫn của nhà sản xuất và bỏ túi vào giữa đĩa xoay. Khi lò đang hoạt động, bắp sẽ nổ và túi sẽ căng lên. Hãy cẩn thận lúc lấy ra và mở túi.
3. Miếng thịt gà 	200-300 g (1 miếng) 400-500 g (2 miếng) 600-700 g (3 miếng) 800-900 g (3-4 miếng)	2-3	Thoa dầu lên miếng thịt gà và ướp gia vị tiêu, muối và ớt bột. Lật mặt có da xuống và sắp thành vòng tròn lên rế trên. Trở gà lại khi nghe tiếng bíp.
4. Bánh mì nguyên ổ đông lạnh 	100-150 g (2 miếng) 200-250 g (4 miếng) 300-350 g (6 miếng)	3-5	Đặt từ 2 đến 6 ổ bánh mì đông lạnh (-18 °C) thành vòng tròn trên rế dưới. Đặt 8 ổ bánh mì đông lạnh chia đều trên rế dưới và rế trên. Chế độ này phù hợp với các món bánh đông lạnh có kích thước nhỏ, như bánh mì và bánh mì baguette cỡ nhỏ.

SỬ DỤNG CHỨC NĂNG RÃ ĐÔNG TỰ ĐỘNG

Chức năng rã đông nhanh tự động cho phép quý vị rã đông thịt, thịt gia cầm, cá, bánh mì. Thời gian rã đông và mức công suất được cài tự động. Quý vị chỉ cần chọn chế độ và trọng lượng.


 Chỉ sử dụng những đĩa an toàn với vi sóng.

Đầu tiên, hãy đặt thực phẩm đông lạnh ở giữa đĩa xoay và đóng cửa lò lại.

- Chọn loại thực phẩm thích hợp bằng cách nhấn nút **Power Defrost (Rã đông)** (❄️) một hoặc nhiều lần. (Xem bảng kế bên).




- Chọn khối lượng thực phẩm bằng cách nhấn các nút (—) và (+). Có thể cài đặt lên đến 2000 g. (Bánh mì/bánh nướng có thể được cài đặt lên đến 1000 g.)



- Nhấn nút .

Kết quả :

- Quá trình rã đông bắt đầu.
- Lò sẽ kêu bíp giữa chừng để nhắc quý vị trở thực phẩm bên trong lò.
- Nhấn nút  lần nữa để kết thúc rã đông.



 Quý vị có thể rã đông thực phẩm theo cách của mình. Để thực hiện, hãy chọn chức năng nấu/hâm nóng bằng vi sóng với mức công suất 180 W. Tham khảo đề mục "Nấu/Hâm nóng" ở trang 10 để biết thêm chi tiết.

CÀI ĐẶT CHỨC NĂNG RÃ ĐÔNG TỰ ĐỘNG

Bảng sau đưa ra nhiều chế độ khác nhau về rã đông tự động, khối lượng, thời gian chờ và các khuyến cáo tương ứng. Tháo bỏ tất cả các loại bao bì trước khi rã đông. Đặt thịt, thịt gia cầm, cá và bánh mì/bánh nướng lên đĩa men.

Mã thực phẩm/ Thực phẩm	Lượng dùng	Thời gian chờ	Khuyến nghị
1. Thịt 	200-2.000 g	20-60 phút.	Bọc các cạnh lại bằng giấy nhôm. Trờ thịt khi nghe tiếng bíp trong lò. Chế độ này phù hợp cho thịt bò, thịt cừu, thịt lợn, thịt miếng để nướng, sườn và thịt băm.
2. Thịt gia cầm 	200-2.000 g	20-60 phút.	Bọc chân và đầu cánh bằng giấy nhôm. Trờ thịt khi nghe tiếng bíp trong lò. Chế độ này thích hợp cho gà nguyên con và gà không nguyên con.
3. Cá 	200-2.000 g	20-50 phút.	Bọc phần đuôi của cá bằng giấy nhôm. Trờ cá khi nghe tiếng bíp trong lò. Chế độ này thích hợp cho cá nguyên con và cá phi lê.
4. Bánh mì/ Bánh ngọt 	125-1000 g	5-20 phút.	Đặt bánh mì trên giấy thấm và trờ khi nghe tiếng bíp trong lò. Đặt bánh ngọt lên trên đĩa men và có thể trờ bánh khi nghe tiếng bíp trong lò. (Lò tiếp tục hoạt động và dừng lại khi quý vị mở cửa lò. Chế độ này thích hợp cho tất cả các loại bánh mì, cắt lát hay nguyên ổ, bánh mì ổ và bánh mì baguette. Sắp xếp các ổ bánh thành vòng tròn. Chế độ này thích hợp cho tất cả các loại bánh bột nở, bánh quy, bánh pho mai và bánh ngọt xốp. Không thích hợp cho bánh bột nhào/đặc, bánh hoa quả và bánh kem hay bánh có phủ sôcôla.

 Chọn chức năng rã đông thủ công với mức công suất 180 W khi quý vị muốn rã đông thủ công. Để biết thêm chi tiết về các chức năng và thời gian rã đông, vui lòng xem trang 27.

SỬ DỤNG CHỨC NĂNG NẤU CÓ CẢM BIẾN

Tám chức năng Nấu có cảm biến đều bao gồm/cung cấp thời gian nấu được cài đặt sẵn.

Quý vị không cần chọn cả thời gian nấu lẫn mức công suất.

Quý vị có thể điều chỉnh loại Nấu có cảm biến bằng cách nhấn nút (—) và (+).

Đầu tiên, hãy đặt thức ăn ở giữa đĩa xoay và đóng cửa lò lại.

 Chỉ sử dụng những đĩa an toàn với vi sóng.

1. Chọn loại thực phẩm thích hợp bằng cách nhấn nút **Sensor Cook (Nấu có cảm biến)** () một hoặc nhiều lần. (Xem bảng kế bên).


Cảm ứng

2. Nhấn nút .

Kết quả : Bắt đầu nấu. Khi nấu xong.

- 1) Lò sẽ kêu bíp bốn lần.
- 2) Tín hiệu nhắc nhở sẽ kêu 3 lần (mỗi phút một lần).
- 3) Giờ hiện hành sẽ được hiển thị lại.


Bắt đầu / +30 giây

 Chỉ sử dụng vật chứa an toàn với vi sóng.

CÀI ĐẶT NẤU CÓ CẢM BIẾN

Bảng sau giới thiệu 8 Chế độ Nấu có cảm biến. Bảng này cung cấp thông tin về mức trọng lượng nên dùng cho mỗi món, thời gian chờ và các khuyến cáo khác tương ứng. Sau khi bắt đầu chế độ nấu, thời gian nấu và mức công suất sẽ được tính toán tự động. Quá trình nấu nướng được kiểm soát bởi hệ thống cảm biến để thuận tiện cho bạn. Sử dụng gang tay khi lấy ra!

Mã thực phẩm/ Thực phẩm	Lượng dùng	Thời gian chờ (phút)	Khuyến nghị
1. Bông cải xanh, bông cải 	200-500 g	1-2	Rửa sạch bông cải và cắt nhỏ. Cho vào một tô thủy tinh có nắp đậy. Thêm 30-45 ml nước (2-3 muỗng canh). Đặt tô vào giữa đĩa xoay. Đậy nắp khi nấu. Khuấy sau thời gian nấu.
2. Cà rốt cắt lát 	200-500 g	1-2	Rửa sạch cà rốt và cắt thành những lát mỏng bằng nhau. Cho rau vào một tô thủy tinh có nắp đậy. Thêm 30-45 ml nước (2-3 muỗng canh). Đặt tô vào giữa đĩa xoay. Đậy nắp khi nấu. Khuấy sau thời gian nấu.
3. Khoai tây đã gọt 	200-800 g	2-3	Rửa sạch và gọt vỏ khoai tây, sau đó cắt thành các miếng bằng nhau. Cho rau vào một tô thủy tinh có nắp đậy. Thêm 45-60 ml nước (3-4 muỗng canh). Đặt tô vào giữa đĩa xoay. Đậy nắp khi nấu.
4. Khoai tây cả vỏ 	200-800 g	3-5	Rửa sạch khoai tây và xăm vỏ khoai bằng nĩa. Sắp khoai tây (mỗi lần khoảng 200 g) theo vòng tròn lên đĩa xoay.

Mã thực phẩm/ Thực phẩm	Lượng dùng	Thời gian chờ (phút)	Khuyến nghị
5. Các loại thức uống (cà phê, sữa, trà, nước uống ở nhiệt độ phòng) 	150-250 g (1 tách hoặc 1 ly)	1-2	Đổ nước vào tách hoặc ly bằng gỗm không đậy nắp và hâm nóng. Đặt vào giữa đĩa xoay. Để chúng trong lò vi sóng. Khuấy lên trước và sau thời gian chờ. Cẩn thận khi lấy tách ra ngoài (xem thêm phần hướng dẫn an toàn).
6. Súp/nước xốt (giữ lạnh) 	250-500 g	2-3	Đổ vào đĩa hoặc tô bằng gỗm có đáy sâu và đậy bằng nắp nhựa trong lúc hâm nóng. Đặt đĩa súp vào giữa đĩa xoay. Khuấy kỹ trước và sau thời gian chờ.
7. Súp đông lạnh (-18 °C) 	250-500 g	2-3	Xăm lỗ trên màng bọc súp đông lạnh và đặt vào giữa đĩa xoay. Đặt súp vào giữa đĩa xoay. Khuấy kỹ trước và sau thời gian chờ.
8. Thực phẩm chế biến sẵn đông lạnh (-18 °C) 	300-500 g	3-4	Xăm lỗ trên màng bọc thực phẩm chế biến sẵn đông lạnh. Đặt thực phẩm vào giữa lò. Chế độ này thích hợp cho các món ăn gồm 2 thành phần (ví dụ thịt với nước xốt và cơm)

Hướng dẫn Nấu có cảm biến Tự động

Cảm biến Tự động cho phép bạn nấu nướng thức ăn tự động bằng cách dò tìm lượng khí sinh ra từ thực phẩm trong khi nấu nướng.

- Khi nấu nướng thức ăn, có nhiều loại khí được sinh ra. Cảm biến Tự động xác định thời gian và mức công suất thích hợp bằng cách dò tìm khí sinh ra từ thực phẩm, không cần phải cài đặt thời gian và mức công suất.
- Khi bạn đặt tô, đĩa chứa thực phẩm bằng nắp hoặc màng nhựa ở chế độ Nấu Có cảm biến, Cảm biến Tự động sẽ dò tìm những khí sinh ra sau khi tồ, đĩa chứa đầy hơi nước.
- Khi quá trình nấu nướng sắp kết thúc, thời gian nấu còn lại sẽ bắt đầu được đếm lùi. Đây là lúc thuận tiện để quý vị xoay trở hoặc khuấy thực phẩm để chín đều nếu cần.
- Trước khi nấu thức ăn theo chế độ có cảm biến tự động, quý vị có thể nêm thêm rau thơm, gia vị hoặc nước xốt. Tuy vậy, có một lưu ý, muối hoặc đường có thể gây ra những vết cháy trên thực phẩm, do đó nên thêm các thành phần này sau khi nấu nướng xong.
- Bàn phím chức năng More/Less (Tăng/Giảm) được sử dụng để tăng hoặc giảm thời gian nấu nướng. Quý vị nên sử dụng chức năng này để điều chỉnh mức độ nấu nướng hợp với khẩu vị của mình. Dụng cụ & Nắp đậy dùng để Nấu có cảm biến.
- Để việc nấu nướng đạt kết quả tốt khi sử dụng chức năng này, hãy thực hiện theo các hướng dẫn sau đây khi chọn hộp chứa và nắp đậy thích hợp từ biểu đồ trong tài liệu này.
- Luôn sử dụng các hộp chứa an toàn với lò vi sóng và đậy bằng nắp hộp hoặc màng bọc nhựa. Khi đậy bằng màng bọc nhựa, gấp một góc lên để cho hơi nước thoát ra ở mức độ thích hợp.
- Luôn đậy bằng nắp riêng của dụng cụ. Nếu dụng cụ không có nắp riêng, hãy sử dụng màng bọc nhựa.
- Đổ đầy ít nhất một nửa dung tích hộp chứa.
- Đối với thực phẩm cần khuấy hoặc xoay trở, quý vị nên khuấy hoặc xoay trở cho đến cuối chu trình Nấu có cảm biến, sau khi thời gian bắt đầu đếm ngược trên màn hình.

Dụng cụ & Nắp đậy dùng để Nấu có cảm biến.

- Để việc nấu nướng đạt kết quả tốt khi sử dụng chức năng này, hãy thực hiện theo các hướng dẫn sau đây khi chọn hộp chứa và nắp đậy thích hợp từ biểu đồ trong tài liệu này.
- Luôn sử dụng các hộp chứa an toàn với lò vi sóng và đậy bằng nắp hộp hoặc màng bọc nhựa. Khi đậy bằng màng bọc nhựa, gấp một góc lên để cho hơi nước thoát ra ở mức độ thích hợp.
- Luôn đậy bằng nắp riêng của dụng cụ. Nếu dụng cụ không có nắp riêng, hãy sử dụng màng bọc nhựa.
- Đổ đầy ít nhất một nửa dung tích hộp chứa.
- Đối với thực phẩm cần khuấy hoặc xoay trở, quý vị nên khuấy hoặc xoay trở cho đến cuối chu trình Nấu có cảm biến, sau khi thời gian bắt đầu đếm ngược trên màn hình.

Quan trọng


- Sau khi lắp đặt lò và cắm điện, không được rút dây điện ra. Cảm biến khí cần thời gian ổn định để quá trình nấu nướng đạt yêu cầu.
- Không nên sử dụng chức năng nấu có cảm biến để nấu liên tục, ví dụ: nấu tiếp ngay sau khi lần nấu trước kết thúc.
- Lắp đặt lò ở nơi thông khí tốt để có luồng khí đối lưu và khả năng làm mát thích hợp, và để đảm bảo cho cảm biến hoạt động chính xác.
- Để tránh hiệu quả nấu nướng kém, không được sử dụng Cảm biến tự động khi nhiệt độ trong phòng quá cao hoặc quá thấp.
- Không được sử dụng chất tẩy để bay hơi để làm vệ sinh lò. Khí sinh ra từ chất tẩy này có thể tác động đến cảm biến.
- Tránh đặt lò gần các thiết bị có độ ẩm cao hoặc phát ra khí, vì điều này sẽ tác động đến khả năng hoạt động chính xác của Cảm biến tự động.
- Luôn giữ sạch bên trong lò. Lau sạch vết thực phẩm đổ ra bằng khăn ẩm.

Lò này được thiết kế chỉ để sử dụng trong gia đình.

SỬ DỤNG CHỨC NĂNG RÁN TỰ ĐỘNG


Với tính năng Rán tự động, thời gian nấu sẽ được tự động thiết lập. Quý vị có thể điều chỉnh lượng khẩu phần bằng cách nhấn nút (—) và (+).
Đầu tiên, hãy đặt đĩa chống dính ở giữa đĩa xoay và đóng cửa lò lại.

- Đặt đĩa chống dính trực tiếp lên đĩa xoay rồi làm nóng trước bằng chế độ kết hợp vi sóng-nướng cao nhất. Nhấn nút **Combi (Kết hợp)** (🔥📶) và cài đặt thời gian làm nóng trước (3 đến 5 phút) bằng cách nhấn nút (—) và (+).




- Nhấn nút ⚠️.

🔊 Luôn sử dụng găng tay khi lấy đĩa chống dính, vì đĩa sẽ rất nóng.



- Mở cửa lò.
Đặt thực phẩm trên đĩa chống dính.
Đóng cửa lò lại.



- Đặt đĩa chống dính lên rế kim loại (hoặc đĩa xoay) bên trong lò.

- Chọn loại thực phẩm thích hợp bằng cách nhấn nút **Crusty Cook (Rán)** (🔥) một hoặc nhiều lần.



- Chọn lượng dùng bằng cách nhấn các nút (—) và (+).
(Xem bảng kế bên)



- Nhấn nút ⚠️.

- Kết quả:**
- Bắt đầu. Khi nấu xong.
 - Lò sẽ kêu bip bốn lần.
 - Tín hiệu nhắc nhở sẽ kêu 3 lần (mỗi phút một lần).
 - Giờ hiện hành sẽ được hiển thị lại.



- Cách vệ sinh đĩa chống dính.**

Vệ sinh đĩa chống dính bằng nước ấm và chất tẩy rửa sau đó xả bằng nước sạch. Không sử dụng bàn chải hoặc miếng xốp cứng nếu không sẽ làm hư lớp phủ.

- Xin lưu ý** Đĩa chống dính không an toàn với máy rửa chén.

CÀI ĐẶT RÁN TỰ ĐỘNG

Bảng sau đưa ra nhiều chế độ rán tự động, khối lượng, thời gian chờ và các khuyến cáo tương ứng khác nhau. Các chế độ này sử dụng cùng với chế độ nấu kết hợp vi sóng và nướng.

Trước khi sử dụng chức năng rán tự động, quý vị nên làm nóng trước đĩa chống dính 3 – 5 phút bằng chế độ kết hợp 600W + nướng. Sử dụng găng tay khi lấy ra!


Thực phẩm (-18 °C)	Lượng dùng	Thời gian làm nóng trước (phút)	Thời gian chờ (phút)	Khuyến nghị
1. Bánh Pizza đông lạnh ***🔥📶	200 g 300 g 400 g 500 g	5	-	Làm nóng trước đĩa chống dính bằng chế độ 600W + nướng. Đặt bánh pizza lên đĩa chống dính. Đặt đĩa chống dính lên rế.
2. Bánh mì baguette đông lạnh ***🔥📶	150 g (1 miếng) 250 g (2 miếng) 350 g (3 miếng)	4	2-3	Làm nóng trước đĩa chống dính bằng chế độ dùng chế độ 450W + nướng. Đặt một bánh mì baguette đông lạnh vào giữa đĩa chống dính, hai bánh mì baguette đông lạnh cạnh nhau trên đĩa chống dính. Chế độ này phù hợp với bánh mì baguette có rau, sườn cừu và phô mai.
3. Bánh nướng đông lạnh ***🔥📶	150 g (1 miếng) 300 g (1-2 miếng) 450 g (1-2 miếng)	3	1-2	Làm nóng trước đĩa chống dính bằng chế độ 600W + nướng. Đặt bánh nướng vào đĩa chống dính. Đặt đĩa chống dính lên rế.
4. Thịt gà tấm bột đông lạnh ***🔥📶	250 g 500 g	4	-	Làm nóng trước đĩa chống dính bằng chế độ 600W + nướng. Thoa một hoặc hai muỗng canh dầu ăn lên đĩa. Rải đều thịt gà tấm bột đông lạnh lên đĩa chống dính. Đảo thịt khi lò kêu bip. Sau đó nhấn nút bắt đầu (start) để tiếp tục.

SỬ DỤNG CHỨC NĂNG RÁN THỦ CÔNG

Đĩa chống dính này cho phép quý vị làm vàng thực phẩm không chỉ ở mặt trên nhờ chức năng nướng, mà còn làm mặt dưới vàng và giòn nhờ nhiệt độ cao của đĩa. Một số loại thực phẩm có thể sử dụng đĩa này được trình bày ở trong bảng (xem trang bên).

Đĩa chống dính cũng có thể sử dụng với thịt lợn muối xông khói, trứng, xúc xích...

- Đặt đĩa chống dính trực tiếp lên đĩa xoay rồi làm nóng trước bằng chế độ kết hợp cao nướng vi sóng cao nhất [600W + Nướng (🔥🔥🔥)] theo thời gian và hướng dẫn trong bảng.



- Luôn sử dụng găng tay khi lấy đĩa chống dính, vì đĩa sẽ rất nóng.


- Thoa dầu lên đĩa nếu quý vị nấu các loại thực phẩm như thịt lợn muối xông khói và trứng, để làm cho món ăn vàng đều.

- Lưu ý rằng đĩa chống dính có phủ một lớp nhựa teflon để tránh xước. Không được sử dụng các vật nhọn như dao để cắt thực phẩm trên đĩa.

- Có thể sử dụng tấm lót bằng nhựa để tránh trầy xước bề mặt của đĩa hoặc lấy thực phẩm ra khỏi đĩa trước khi cắt.


- Đặt thực phẩm lên đĩa chống dính.

- Không được đặt bất kỳ vật nào không chịu được nhiệt lên trên đĩa, như bát nhựa, v.v...



- Không được đặt đĩa chống dính lên lò mà không đặt trên đĩa xoay.

- Đặt đĩa chống dính lên rế kim loại (hoặc đĩa xoay) bên trong lò.



- Chọn thời gian nấu và công suất phù hợp. Tham khảo bảng ở trang sau.

☑ Cách vệ sinh đĩa chống dính

Vệ sinh đĩa chống dính bằng nước ấm và nước rửa chén, rồi xả lại bằng nước sạch.

- ☑ Không sử dụng bàn chải hoặc miếng xốp cứng nếu không sẽ làm hư lớp phủ.

☑ Xin lưu ý

Đĩa chống dính không an toàn với máy rửa chén.

CÀI ĐẶT RÁN THỦ CÔNG

Chúng tôi đề xuất làm nóng đĩa chống dính ngay trên đĩa xoay.

Làm nóng đĩa chống dính với công suất 600 W + chức năng nướng (🔥🔥🔥) và theo thời gian hướng dẫn trong bảng.

Thực phẩm	Khẩu phần	Công suất	Thời gian làm nóng trước (phút)	Thời gian nấu (phút)	Khuyến nghị
Thịt lợn muối xông khói	4 miếng (80 g)	600 W + Nướng	3	3-3½	Làm nóng đĩa chống dính. Xếp các lát thịt cạnh nhau trên đĩa chống dính. Đặt đĩa chống dính lên rế.
	8 miếng (160 g)			4½-5	
Cà chua nướng	200 g (2 miếng)	450 W + Nướng	3	3	Làm nóng đĩa chống dính. Cắt cà chua làm đôi. Cho một ít pho mai lên trên. Xếp thành vòng tròn trên đĩa chống dính. Đặt đĩa chống dính lên rế.
	400 g (4 miếng)			4	
Bánh bơ-gơ (đông lạnh)	2 miếng (125 g)	600 W + Nướng	3	6-6½	Làm nóng đĩa chống dính. Xếp bánh bơ-gơ đông lạnh thành vòng tròn trên đĩa chống dính. Đặt đĩa chống dính lên rế. Trờ sau 4-5 phút.
	4 miếng (250 g)			8-8½	


Thực phẩm	Khẩu phần	Công suất	Thời gian làm nóng trước (phút)	Thời gian nấu (phút)	Khuyến nghị
Pizza cỡ nhỏ (giữ lạnh)	100-150 g	600 W + Nướng	5	3-3½	Làm nóng đĩa chống dính. Đặt các miếng bánh pizza giữ lạnh theo một vòng tròn trên đĩa. Đặt đĩa chống dính lên rế.
	200-250 g			4-4½	
Khoai tây nướng bằng lò (đông lạnh)	200 g	450 W + Nướng	4	9	Làm nóng đĩa chống dính. Xếp khoai tây nướng lên đĩa chống dính. Đặt đĩa lên rế. Trờ thực phẩm sau một nửa thời gian đã đông.
	300 g			12	
	400 g			15	
Khoai tây nướng	250 g	600 W + Nướng	4	4½-5	Làm nóng đĩa chống dính. Cắt khoai tây làm đôi. Cho khoai tây lên đĩa chống dính với mặt cắt úp xuống. Xếp thành vòng tròn. Đặt đĩa lên rế.
	500 g			7-7½	
Chả cá (đông lạnh)	150 g (5 miếng)	600 W + Nướng	4	6-6½	Làm nóng đĩa chống dính. Tráng đĩa với 1 muỗng canh dầu ăn. Xếp lát cá tẩm bột thành vòng tròn trên đĩa. Trờ sau 3½ phút (5 miếng) hoặc 5 phút (10 miếng).
	300 g (10 miếng)			8½-9	

CHỌN VỊ TRÍ ĐẶT THIẾT BỊ ĐUN NÓNG


Thiết bị đun nóng được sử dụng khi nướng. Chỉ có một vị trí được ghi trong bảng. Chúng tôi cần lưu ý khách hàng về thời gian đặt thiết bị ở vị trí thẳng đứng.

- Vị trí nằm ngang thích hợp với chế độ nướng hoặc kết hợp vi sóng + nướng.

 Chỉ thay đổi vị trí của thiết bị đun nóng khi nó đã nguội và không dùng lực quá mạnh khi đặt nó vào vị trí thẳng đứng.

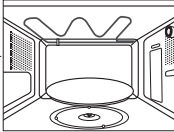Để đặt thiết bị đun nóng về...	Thì...	
Vị trí nằm ngang (nướng hoặc kết hợp vi sóng + nướng)	- Kéo thiết bị đun nóng về phía quý vị đang đứng - Đẩy thiết bị lên cho đến khi nằm song song với nóc lò.	


Khi lau chùi phần trên phía trong khoang lò, nên hạ thiết bị đun nóng nghiêng một góc 45 ° để lau chùi.

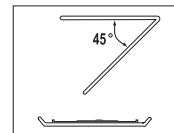

CHỌN PHỤ KIỆN

Sử dụng các vật chứa an toàn với vi sóng; không sử dụng các hộp, đĩa nhựa, ly giấy, các loại khăn, v.v..

Nếu muốn chọn chế độ nấu kết hợp (nướng và vi sóng), thì quý vị chỉ nên sử dụng dụng cụ nấu ăn an toàn cho lò vi sóng và chịu nhiệt.



 Để biết thêm thông tin chi tiết về nồi nấu và dụng cụ thích hợp, hãy tham khảo hướng dẫn sử dụng dụng cụ nấu ở trang 21-22.


NƯỚNG

Chế độ nướng cho phép quý vị nấu và nướng thực phẩm nhanh chóng, mà không sử dụng vi sóng. Để sử dụng cho mục đích này, một rế nướng được cung cấp với lò vi sóng của quý vị.


1. Làm nóng trước vỉ nướng đến nhiệt độ yêu cầu, bằng cách nhấn nút  và cài đặt thời gian làm nóng trước bằng cách nhấn nút (—) và (+).



2. Nhấn nút .



3. Hãy mở cửa và đặt thực phẩm lên rế. Đóng cửa lò.



4. Nhấn nút .

Kết quả: Các ký hiệu sau đây sẽ được hiển thị:



5. Chọn thời gian nướng bằng cách nhấn nút (—) và (+). Thời gian nướng tối đa là 60 phút.



6. Nhấn nút .

Kết quả: Bắt đầu nướng. Khi nấu xong.

- 1) Lò sẽ kêu bíp bốn lần.
- 2) Tín hiệu nhắc nhở sẽ kêu 3 lần (mỗi phút một lần).
- 3) Giờ hiện hành sẽ được hiển thị lại.

 Không phải lo lắng khi thiết bị bật và tắt trong khi nướng. Hệ thống này được thiết kế để ngăn không cho lò quá nhiệt.

 Luôn luôn sử dụng găng tay khi chạm vào vật chứa, vì chúng rất nóng. Kiểm tra thiết bị đun nóng đúng vị trí nằm ngang.




KẾT HỢP VI SÓNG VÀ NƯỚNG

Quý vị cũng có thể kết hợp nấu vi sóng với nướng, để nấu và rán vàng nhanh chóng cùng một lúc.


 **LUÔN LUÔN** dùng dụng cụ nấu an toàn cho lò vi sóng và chịu nhiệt. Đĩa thủy tinh hoặc sứ khá lý tưởng vì chúng cho phép vi sóng tác dụng đều vào thực phẩm.

 **LUÔN LUÔN** sử dụng găng tay khi chạm vào các phần bên trong lò, vì chúng có thể rất nóng.

1. Đảm bảo rằng thiết bị đun nóng được đặt thẳng đứng; xem trang 19 để biết thêm chi tiết.




2. Mở cửa lò. Đặt thực phẩm lên rế và đặt rế lên đĩa xoay. Đóng cửa lò.



3. Nhấn nút **Combi (Kết hợp)** ().

Kết quả: Những chỉ báo sau đây sẽ được hiển thị:


 (chế độ vi sóng và nướng)
600 W (mức công suất)



 Chọn mức công suất bằng các nhấn nút **Combi (Kết hợp)** () nhiều lần cho đến khi mức công suất phù hợp hiển thị.

 Quý vị không thể đặt nhiệt độ của chế độ nướng.

4. Đặt thời gian nướng bằng cách nhấn nút (—) và (+). Thời gian nướng tối đa là 60 phút.



5. Nhấn nút .

Kết quả: Quá trình nấu kết hợp bắt đầu. Khi nấu xong.

- 1) Lò sẽ kêu bíp bốn lần.
- 2) Tín hiệu nhắc nhở sẽ kêu 3 lần (mỗi phút một lần).
- 3) Giờ hiện hành sẽ được hiển thị lại.



 Mức vi sóng tối đa cho chế độ kết hợp vi sóng và nướng là 600 W.

TẮT TIẾNG KÊU BÍP

Quý vị có thể tắt tiếng bíp bất cứ lúc nào quý vị muốn.


1. Nhấn đồng thời nút  và .

Kết quả :

- Ký hiệu sau đây sẽ được hiển thị.

OFF

- Lò sẽ không kêu bíp mỗi khi quý vị nhấn nút.




2. Để mở lại tiếng bíp, nhấn đồng thời nút  và  lần nữa.

Kết quả :

- Ký hiệu sau đây sẽ được hiển thị.

ON

- Lò sẽ phát lại tiếng bíp.



KHÓA AN TOÀN CHO LÒ VI SÓNG

Lò vi sóng của bạn được trang bị một chương trình đặc biệt An toàn với trẻ em, cho phép lò được "khóa" làm cho trẻ em hoặc bất kỳ ai không quen không thể vận hành nó một cách ngẫu nhiên.


Lò có thể được khóa bất kỳ lúc nào.

1. Nhấn đồng thời nút  và .

Kết quả :

- Khi lò bị khóa lại (không thể chọn bất kỳ chức năng nào).
- Màn hình hiển thị "L".


L



2. Để mở khóa cho lò, hãy nhấn nút  và nút  cùng lúc một lần nữa.

Kết quả :

Lò có thể được sử dụng một cách bình thường.



HƯỚNG DẪN VỀ DỤNG CỤ NẤU

Để nấu thực phẩm trong lò vi sóng, vi sóng có thể tác động vào thực phẩm, mà không bị phản xạ hoặc hấp thu bởi chiếc đĩa đang dùng.

Cần cẩn thận khi chọn dụng cụ nấu. Nếu dụng cụ nấu được ghi là an toàn cho lò vi sóng, quý vị không cần phải lo lắng.

Bảng sau đây liệt kê nhiều loại dụng cụ nấu và đồng thời nêu rõ thời gian và cách thức sử dụng chúng trong một lò vi sóng.

Dụng cụ nấu	An toàn vi sóng	Ghi chú
Giấy nhôm	✓ ✗	Có thể được sử dụng với số lượng nhỏ để bảo vệ thực phẩm không nấu quá chín. Hồ quang xuất hiện nếu giấy nhôm quá gần vách lò hoặc nếu dùng quá nhiều giấy nhôm.
Đĩa nướng	✓	Không nên để nóng trước quá tám phút.
Đồ sứ và đồ bằng đất nung	✓	Sành, gốm, đồ đất có men và đồ sứ làm bằng đất sét trộn với tro xương thường thích hợp, miễn là không có trang trí hoa văn kim loại.
Đĩa polyester loại dùng rồi bỏ	✓	Một số thực phẩm đông lạnh được đóng gói trong các đĩa như vậy.
Bao bì thực phẩm nhanh		
• Ly tách bằng Polystyrene	✓	Có thể được sử dụng để hâm thực phẩm. Nấu quá lâu có thể làm cho polystyrene chảy ra.
• Túi giấy hoặc bọc giấy báo	✗	Có thể bắt lửa.
• Giấy tái chế hoặc trang trí kim loại	✗	Có thể làm net lửa.
Vật dụng thủy tinh		
• Dùng chung cho lò và sử dụng bình thường	✓	Có thể sử dụng, miễn là không có trang trí bằng kim loại.

Dụng cụ nấu	An toàn vi sóng	Ghi chú
Vật dụng thủy tinh tinh xảo	✓	Có thể dùng để hâm thực phẩm hoặc chất lỏng. Thủy tinh mỏng có thể nứt vỡ khi bị đun nóng đột ngột.
Bình thủy tinh	✓	Phải tháo nắp. Chỉ thích hợp cho hâm nóng.
Kim loại Đĩa	✗	Có thể làm net lửa hoặc gây hỏa hoạn.
Túi cột miệng dùng cho tủ lạnh	✗	
Giấy Khay, ly tách, khăn ăn và giấy thấm	✓	Dùng với thời gian nấu và hâm nóng ngắn. Vẫn hấp thu độ ẩm dư thừa.
Giấy tái chế	✗	Có thể làm net lửa.
Nhựa Hộp chứa	✓	Đặc biệt nếu đó là nhựa chống nhiệt. Vài loại nhựa khác có thể biến dạng hoặc mất màu ở nhiệt độ cao. Không dùng nhựa Melamine.
Màng bọc thực phẩm	✓	Có thể được sử dụng để giữ độ ẩm. Không được cho chạm vào thực phẩm. Cần thận khi gỡ màng bọc vì hơi nóng sẽ thoát ra.
Túi dùng cho tủ lạnh	✓ ✗	Chỉ có thể dùng nếu được chứng nhận chịu sôi hoặc dùng được cho lò. Không nên bịt kín hơi. Chọc thủng bằng nĩa, nếu cần.
Giấy sáp và giấy chống dầu	✓	Có thể được sử dụng để giữ độ ẩm và tránh văng tung tóe.

- ✓ : Khuyến nghị
✓✗ : Cần thận khi sử dụng
✗ : Không an toàn

HƯỚNG DẪN NẤU

VI SÓNG

Năng lượng vi sóng thường thâm nhập vào thực phẩm, thu hút và hấp thu bởi nước, chất béo và đường của nó.

Vi sóng làm cho các phân tử trong thực phẩm di chuyển nhanh. Sự chuyển động nhanh của các phân tử này sẽ tạo ra ma sát và kết quả là nhiệt sẽ làm chín thực phẩm.

NẤU

Dụng cụ nấu dùng cho nấu vi sóng:

Dụng cụ nấu phải cho phép năng lượng vi sóng đi qua nó với hiệu quả tối đa. Vi sóng bị phản xạ bởi kim loại, như thép, nhôm và đồng, nhưng nó có thể đi qua đồ men, thủy tinh, gốm và nhựa cũng như giấy và gỗ. Do vậy không bao giờ nấu thực phẩm với dụng cụ chứa bằng kim loại.

Thực phẩm thích hợp cho việc nấu bằng vi sóng:

Nhiều loại thực phẩm thích hợp cho việc nấu bằng vi sóng, bao gồm rau cải tươi và đông lạnh, trái cây, mì ống, gạo, ngũ cốc, đậu, cá, và thịt. Nước chấm, sữa trứng, súp, bánh pudding nóng, mứt, và tương ớt cũng có thể được nấu trong lò vi sóng. Nói chung, nấu nướng bằng vi sóng rất lý tưởng cho mọi thực phẩm được chuẩn bị một cách bình thường trong ngăn giữ nhiệt. Bơ lỏng hoặc sôcôla, ví dụ (xem chương về lời khuyên, kỹ thuật và mẹo).

Bao phủ thực phẩm khi nấu

Bao phủ thực phẩm khi nấu ăn rất quan trọng, khi nước bốc hơi và tham gia vào quá trình để nấu nướng. Thực phẩm có thể được bao phủ bằng nhiều cách: chẳng hạn như bao phủ với một khay men, sử dụng nắp hoặc giấy bóng dùng cho lò vi sóng.

Thời gian chờ

Sau khi nấu thực phẩm xong thời gian chờ rất quan trọng giúp nhiệt lan tỏa đều trong thực phẩm.

Hướng dẫn nấu cho rau cải đông lạnh

Sử dụng một tô thủy tinh chịu nhiệt thích hợp có nắp đậy. Nấu trong thời gian tối thiểu – xem bảng. Tiếp tục nấu để đạt kết quả quý vị mong muốn. Khuấy hai lần lúc nấu và một lần sau khi nấu. Thêm muối, rau thơm hoặc bơ sau khi nấu. Đậy nắp trong khi chờ.

Thực phẩm	Khẩu phần	Công suất	Thời gian (phút)	Thời gian chờ (phút)	Hướng dẫn
Rau bina	150 g	600 W	5-6	2-3	Thêm 15 ml Thêm 15 ml (1 muỗng canh) nước lạnh.
Bông cải xanh	300 g	600 W	8-9	2-3	Thêm 30 ml Thêm 15 ml (2 muỗng canh) nước lạnh.
Đậu	300 g	600 W	7-8	2-3	Thêm 15 ml Thêm 15 ml (1 muỗng canh) nước lạnh.
Đậu xanh	300 g	600 W	7½-8½	2-3	Thêm 30 ml Thêm 15 ml (2 muỗng canh) nước lạnh.
Rau cải hỗn hợp (cà rốt/đậu/bắp ngô)	300 g	600 W	7-8	2-3	Thêm 15 ml Thêm 15 ml (1 muỗng canh) nước lạnh.
Rau cải hỗn hợp (kiểu Trung Hoa)	300 g	600 W	7½-8½	2-3	Thêm 15 ml Thêm 15 ml (1 muỗng canh) nước lạnh.

Hướng dẫn nấu cơm và mì ống

Cơm:

Sử dụng một tô thủy tinh chịu nhiệt lớn có nắp đậy – gạo sẽ nở gấp đôi thể tích khi được nấu chín. Nấu có đậy nắp.

Sau khi thời gian nấu kết thúc, khuấy trước khi chờ nguội để thêm muối hoặc thêm rau thơm và bơ.

Lưu ý: gạo có thể không hút hết nước khi nấu xong.

Mì ống:

Dùng một chén thủy tinh lớn chịu nhiệt. Thêm nước để nấu, một chút muối và khuấy đều. Nấu không đậy nắp. Khuấy trong lúc và sau khi nấu. Đậy nắp trong thời gian chờ và sau đó chất cạn nước.

Thực phẩm	Khẩu phần	Công suất	Thời gian (phút)	Thời gian chờ (phút)	Hướng dẫn
Cơm trắng (nấu sơ)	250 g	900 W	15-16	5	Thêm 500 ml nước lạnh. Thêm 750 ml nước lạnh.
	375 g		17½-18½		
Gạo lức (nấu sơ)	250 g	900 W	20-21	5	Thêm 500 ml nước lạnh. Thêm 750 ml nước lạnh.
	375 g		22-23		
Cơm trộn (gạo + gạo dại)	250 g	900 W	16-17	5	Thêm 500 ml nước lạnh.
Ngũ cốc trộn (gạo + ngũ cốc)	250 g	900 W	17-18	5	Thêm 400 ml nước lạnh.
Mì ống	250 g	900 W	10-11	5	Thêm 1000 ml nước nóng.

Hướng dẫn nấu cho rau cải tươi

Sử dụng một tô thủy tinh chịu nhiệt thích hợp có nắp đậy. Thêm 30-45 ml nước lạnh (2-3 muỗng canh) cho mỗi 250 g trừ khi một lượng nước khác được đề xuất – xem bảng. Nấu trong thời gian tối thiểu – xem bảng. Tiếp tục nấu để đạt kết quả quý vị mong muốn. Khuấy một lần trong lúc nấu và một lần sau khi nấu. Thêm muối, rau thơm hoặc bơ sau khi nấu. Đậy nắp trong thời gian chờ là 3 phút.

Mẹo: Cắt rau thành từng đoạn bằng nhau. Càng cắt nhỏ, rau càng mau chín.

Các loại rau nên được nấu ở mức công suất vi sóng cao nhất (900 W).

Thực phẩm	Khẩu phần	Thời gian (phút)	Thời gian chờ (phút)	Hướng dẫn
Bông cải xanh	250 g	3½-4	3	Chuẩn bị các bông cải kích thước đều nhau. Xếp đặt cộng vào giữa.
	500 g	6-7		
Cải Brúcxen	250 g	5-5½	3	Thêm 60-75 ml (5-6 muỗng canh) nước.
Cà rốt	250 g	3½-4	3	Cắt cà rốt thành lát đều nhau.
Cải xúp lơ	250 g	4-4½	3	Chuẩn bị các bông cải kích thước đều nhau. Cắt các bông lớn làm đôi. Xếp đặt cộng vào giữa.
	500 g	6½-7½		
Bí xanh	250 g	3-3½	3	Cắt bí thành lát. Thêm 30 ml (2 muỗng canh) nước hoặc một cục bơ. Nấu cho đến khi mềm.
Cà tím	250 g	2½-3	3	Cắt cà thành lát nhỏ và đổ vào 1 muỗng canh nước chanh.
Tỏi tây	250 g	3-3½	3	Cắt tỏi thành lát dày.

Thực phẩm	Khẩu phần	Thời gian (phút)	Thời gian chờ (phút)	Hướng dẫn
Nấm	125 g	1-1½	3	Chuẩn bị nấm để nguyên hay cắt ra. Không thêm chút nước nào. Đổ nước chanh vào. Thêm gia vị muối và tiêu. Chắt bớt nước trước khi dùng.
	250 g	2-2½		
Nấm	125 g	1-1½	3	Chuẩn bị nấm để nguyên hay cắt ra. Không thêm chút nước nào. Đổ nước chanh vào. Thêm gia vị muối và tiêu. Chắt bớt nước trước khi dùng.
	250 g	2-2½		
Củ hành	250 g	5-5½	3	Cắt củ hành thành lát hoặc cắt đôi. Chỉ thêm 15 ml (1 muỗng canh) nước.
Ớt	250 g	4-4½	3	Cắt ớt thành lát nhỏ.
Khoai tây	250 g	3-4	3	Cân khoai tây đã lột vỏ và cắt làm đôi hoặc làm tư đều đặn.
	500 g	6-7		
Củ cải	250 g	4½-5	3	Cắt củ cải thành khối nhỏ.

HÂM NÓNG

Lò vi sóng của quý vị sẽ hâm nóng thực phẩm với thời gian ít hơn so với lò truyền thống.

Sử dụng các mức công suất và thời gian hâm nóng trong bảng sau như một hướng dẫn. Thời gian trong bảng giả định là nước đang ở nhiệt độ phòng khoảng +18 đến +20 °C hoặc với thực phẩm giữ lạnh ở nhiệt độ +5 đến +7 °C.

Sắp xếp và đậy nắp

Tránh hâm nóng khối lớn như miếng thịt chưa cắt – chúng sẽ bị cháy và khô trước khi bên trong được nóng lên. Hâm nóng các miếng nhỏ sẽ thành công hơn.

Mức công suất và khuấy

Vài loại thực phẩm có thể được hâm nóng khi dùng công suất 900 W trong khi các thực phẩm khác hâm nóng ở mức 600 W, 450 W hoặc ngay cả 300 W.

Hãy kiểm tra ở các bảng hướng dẫn. Nói chung, hâm nóng thực phẩm ở mức công suất thấp tốt hơn, nếu thực phẩm dạng mảnh dễ, số lượng nhiều, hoặc cần hâm nóng nhanh chóng (ví dụ dạng miếng nhỏ). Khuấy đều hoặc đảo thực phẩm lúc hâm nóng để có kết quả tốt hơn. Nếu được, khuấy lại trước khi dùng.

Cần quan tâm đặc biệt khi hâm chất lỏng và thực phẩm cho trẻ. Để tránh hiện tượng chất lỏng chảy tràn khi nấu và có thể bị bỏng, hãy khuấy trước, trong và sau khi nấu. Giữ chúng trong lò vi sóng trong thời gian chờ. Chúng tôi đề xuất đặt muống nhựa hoặc thủy tinh vào chất lỏng. Tránh nấu thực phẩm quá lâu (và do vậy thực phẩm bị hỏng). Tốt nhất là ước lượng thời gian nấu ít hơn và thêm thời gian nấu, nếu cần.

Thời gian đun nóng và chờ

Khi hâm nóng thực phẩm lần đầu, cần ghi chú thời gian đã thực hiện – để tham khảo sau này.

Luôn đảm bảo là thực phẩm được hâm nóng đều khắp.

Cho phép thực phẩm duy trì một khoảng thời gian ngắn sau khi hâm nóng – để nhiệt độ lan đều.

Thời gian chờ đề xuất sau khi hâm nóng là 2-4 phút, trừ khi có một thời gian khác được đề xuất trên biểu đồ.

Cần quan tâm đặc biệt khi hâm chất lỏng và thực phẩm cho trẻ. Cũng cần xem chương về các lưu ý an toàn.

HÂM NÓNG CHẤT LỎNG

Luôn cho phép thời gian chờ tối thiểu là 20 giây sau khi lò tắt để cho nhiệt độ lan đều. Khuấy đều trong khi hâm nóng, nếu cần, và **LUÔN LUÔN** khuấy sau khi hâm nóng. Để tránh hiện tượng chảy tràn và có thể gây bỏng, quý vị cần đặt một muống hoặc que thủy tinh vào chất lỏng đồng thời khuấy trước, trong và sau khi hâm.

HÂM NÓNG THỨC ĂN DÀNH CHO TRẺ

THỨC ĂN DÀNH CHO TRẺ: Đổ ra một đĩa men sâu. Đậy bằng nắp nhựa. Khuấy đều sau khi hâm nóng! Để yên trong 2-3 phút trước khi dùng. Khuấy lại và kiểm tra nhiệt độ. Nhiệt độ sử dụng đề xuất: khoảng 30-40 °C.

SỮA DÀNH CHO TRẺ: Rót sữa vào một chai thủy tinh đã được khử trùng. Hâm nóng không đậy nắp. Không bao giờ hâm nóng bình sữa có gắn núm vú, vì bình có thể bị nổ do quá nóng. Lắc đều trước thời gian chờ và khuấy lại trước khi dùng! Luôn luôn cẩn thận kiểm tra nhiệt độ sữa của trẻ hoặc sữa trước khi cho trẻ ăn. Nhiệt độ sử dụng đề xuất: khoảng 37 °C.

CHÚ Ý: Đặc biệt, thực phẩm dành cho trẻ cần được kiểm tra cẩn thận trước khi cho trẻ dùng để tránh bị bỏng.

Sử dụng các mức công suất và thời gian trong bảng tiếp theo như một hướng dẫn cho việc hâm nóng.

Hâm nóng thực phẩm và sữa dành cho trẻ

Sử dụng các mức công suất và thời gian trong bảng này như một hướng dẫn cho việc hâm nóng.

Thực phẩm	Khẩu phần	Công suất	Thời gian	Thời gian chờ (phút)	Hướng dẫn
Thực phẩm dành cho trẻ (rau cải + thịt)	190 g	600 W	30 giây.	2-3	Đổ ra một đĩa men sâu. Đậy nắp khi nấu. Khuấy sau thời gian nấu. Chờ trong 2-3 phút. Trước khi dùng, hãy khuấy đều và kiểm tra nhiệt độ cẩn thận.
Cháo cho trẻ (ngũ cốc + sữa + trái cây)	190 g	600 W	20 giây	2-3	Đổ ra một đĩa men sâu. Đậy nắp khi nấu. Khuấy sau thời gian nấu. Chờ trong 2-3 phút. Trước khi dùng, hãy khuấy đều và kiểm tra nhiệt độ cẩn thận.
Sữa dành cho trẻ	100 ml 200 ml	300 W	30-40 giây	2-3	Khuấy hoặc lắc đều và rót vào một chai thủy tinh đã khử trùng. Đặt vào giữa đĩa xoay. Không đậy nắp khi nấu. Lắc đều và chờ ít nhất 3 phút. Trước khi dùng, hãy lắc đều và kiểm tra nhiệt độ cẩn thận.

Hâm nóng chất lỏng và thực phẩm

Sử dụng các mức công suất và thời gian trong bảng này như một hướng dẫn cho việc hâm nóng.

Thực phẩm	Khẩu phần	Công suất	Thời gian (phút)	Thời gian chờ (phút)	Hướng dẫn
Các loại thức uống (cà phê, sữa, trà, nước uống ở nhiệt độ phòng)	150 ml (1 tách) 300 ml (2 tách) 450 ml (3 tách) 600 ml (4 tách)	900 W	1-1½ 1½-2 2½-3 3-3½	1-2	Đổ vào tách và hâm nóng không đậy nắp: 1 tách đặt ở trung tâm, 2 tách đặt đối diện nhau, 3 tách đặt trên một hình tròn. Giữ trong lò vi sóng trong thời gian chờ và khuấy đều.
Súp (giữ lạnh)	250 g 350 g 450 g 550 g	900 W	2-2½ 2½-3 3-3½ 3½-4	2-3	Đổ vào một đĩa men sâu hoặc tô men sâu. Đậy bằng nắp nhựa. Khuấy đều sau khi hâm nóng. Khuấy lại trước khi dùng.
Món hầm (giữ lạnh)	350 g	600 W	4½-5½	2-3	Đặt món hầm vào một đĩa men sâu. Dùng nắp nhựa đậy lại. Khuấy lúc đang hâm nóng và khuấy lại trước lúc chờ và lúc dùng.
Mì ống với nước sốt (giữ lạnh)	350 g	600 W	3½-4½	3	Đặt mì ống (như spaghetti hoặc nui trứng) vào một đĩa men cạn. Đậy bằng giấy bóng dùng cho lò vi sóng. Khuấy trước khi dùng.

Thực phẩm	Khẩu phần	Công suất	Thời gian (phút)	Thời gian chờ (phút)	Hướng dẫn
Chăn nước sốt (giữ lạnh) vào mì ống	350 g	600 W	4-5	3	Đặt mì ống sốt thịt (như ravioli, tortellini) vào đĩa men sâu. Đậy bằng nắp nhựa. Khuấy lúc đang hâm nóng và khuấy lại trước lúc chờ và lúc dùng.
Món ăn trên đĩa (giữ lạnh)	350 g	600 W	4½-5½	3	Đặt 2-3 món ăn giữ lạnh vào một đĩa men. Bọc bằng giấy bóng dùng cho lò vi sóng.
	450 g		5-6		
	550 g		5½-6½		

Hướng dẫn cho hâm nóng kép

Sử dụng các mức công suất và thời gian trong bảng này như một hướng dẫn cho việc hâm nóng.

Thực phẩm	Khẩu phần	Công suất	Thời gian (phút)	Thời gian chờ (phút)	Hướng dẫn
Súp (giữ lạnh)	2 x 250 g	900 W	3½-4½	2-3	Rót vào hai đĩa sứ và đậy lại. Đặt một đĩa vào đĩa xoay, đĩa còn lại lên đĩa xoay. Khuấy đều sau khi hâm nóng. Khuấy lại trước khi dùng.
	2 x 350 g		5-6		
Cà ri gà & cơm (giữ lạnh)	2 x 350 g	600 W	7-8½	3	Đặt mỗi hai phần thực phẩm giữ lạnh vào hai đĩa sứ. Đậy bằng phim sử dụng cho lò vi sóng. Đặt một đĩa trực tiếp vào đĩa xoay, đĩa còn lại đặt trên rế.

Món ăn trên đĩa (giữ lạnh)	2 x 350 g	600 W	7½-9	3	Đặt hai phần thực phẩm giữ lạnh vào hai đĩa sứ nông. Đậy bằng phim sử dụng cho lò vi sóng. Đặt một đĩa vào đĩa xoay, đĩa còn lại lên đĩa xoay.
----------------------------	-----------	-------	------	---	--

RÃ ĐỒNG THỦ CÔNG

Lò vi sóng là một phương thức tuyệt vời cho rã đông thực phẩm. Lò vi sóng rã đông tốt thực phẩm đông lạnh trong một thời gian ngắn. Điều này cực kỳ thuận lợi, nếu gia đình quý vị có khách viếng đột xuất. Thịt gia cầm đông lạnh phải được rã đông hoàn toàn trước khi nấu. Bỏ mọi dây buộc kim loại và mọi lớp bao để cho nước chảy ra ngoài khi rã đông.

Đặt thực phẩm đông lạnh trên một đĩa không đậy nắp. Lật nghiêng phân nửa, chất chất lỏng và gỡ bỏ mọi phần càng nhanh càng tốt.

Kiểm tra thực phẩm để bảo đảm rằng thực phẩm không nguội lạnh.

Nếu các phần nhỏ hơn và mỏng hơn của thực phẩm đông lạnh bắt đầu nóng lên, chúng có thể còn được bọc bằng giấy nhôm quanh chúng lúc rã đông.

Có thể thịt gia cầm bắt đầu được làm nóng mặt ngoài, ngưng chảy tan ra và cho phép duy trì trong 20 phút trước khi tiếp tục.

Sắp xếp cho cá, thịt và thịt gia cầm được duy trì nhằm rã đông hoàn toàn. Thời gian chờ cho rã đông hoàn toàn thay đổi phụ thuộc vào số lượng thực phẩm rã đông. Hãy tham khảo bảng sau đây.

Mẹo:

Thực phẩm mỏng rã đông hiệu quả hơn thực phẩm dày và lượng thực phẩm nhỏ cần ít thời gian hơn lượng thực phẩm lớn. Hãy ghi nhớ mẹo này khi làm đông và rã đông thực phẩm.

Để rã đông thực phẩm đông lạnh ở nhiệt độ khoảng -18 đến -20 °C, tham khảo bảng hướng dẫn sau.

Mọi thực phẩm đông lạnh cần rã đông ở mức công suất (180 W).

Thực phẩm	Khẩu phần	Thời gian (phút)	Thời gian chờ (phút)	Hướng dẫn
Thịt				
Bò cắt lát	200 g	6-7	15-30	Đặt thịt vào một đĩa men cạn. Bọc các cạnh mỏng bằng giấy nhôm.
Miếng thịt heo	400 g	10-12		
	250 g	7-8		Trở thực phẩm sau một nửa thời gian rã đông!
Thịt gia cầm				
Miếng thịt gà	500 g (2 miếng)	14-15	15-60	Trước hết, đặt các miếng gà với phần da hướng xuống, nguyên con gà với phần ngực hướng xuống một đĩa men cạn. Bọc phần mỏng như cánh và phần đuôi bằng giấy nhôm. Trở thực phẩm sau một nửa thời gian rã đông!
Nguyên con gà	1200 g	32-34		
Cá				
Phi lê Cá	200 g	6-7	10-25	Đặt cá đông lạnh vào giữa một đĩa men cạn.
	400 g	11-13		Sắp phần mỏng hơn bên dưới các phần dày. Bọc các đầu nhọn bằng giấy nhôm. Trở thực phẩm sau một nửa thời gian rã đông!
Trái cây				
Quả mọng	250 g	6-7	5-10	Xếp trái cây lên một đĩa thủy tinh tròn, cạn (có đường kính lớn).
Bánh mì				
Bánh mì tròn (mỗi miếng 50 g)	2 miếng 4 miếng	1-1½ 2½-3	5-20	Xếp bánh mì theo vòng tròn hay theo chiều nằm ngang trên giấy thấm ở giữa đĩa xoay. Trở thực phẩm sau một nửa thời gian rã đông!
Bánh mì nướng/sandwich	250 g	4-4½		
Bánh mì Đức (bột mì + bột lúa mạch)	500 g	7-9		

NƯỚNG

Thiết bị đun nóng để nướng đặt ở bên dưới lớp trên cùng của khoang nướng. Nó hoạt động khi cửa lò đã đóng và đĩa xoay đang xoay. Đĩa xoay giúp thực phẩm chín vàng đều hơn. Làm nóng vì nướng trước trong thời gian 4 phút sẽ làm cho thực phẩm chín nhanh hơn.

Đồ dùng chứa thực phẩm để nướng:

Phải chịu lửa và bằng kim loại. Không sử dụng bất kỳ loại dụng cụ nào bằng nhựa, vì chúng sẽ bị nóng chảy.

Thực phẩm thích hợp để nướng:

Thịt sườn, xúc xích, thịt miếng để nướng, hamburger, thịt lợn muối xông khói và lát thịt đùi muối, miếng cá mỏng, sandwich và tất cả các loại bánh mì nướng có phết thêm gia vị.

Các lưu ý quan trọng:

Khi chỉ sử dụng chế độ nướng, phải đảm bảo lò đun nóng nằm ngang bên dưới mặt trên của khoang lò và vị trí đứng không sát thành sau. Hãy nhớ rằng thực phẩm phải được đặt trên rế trên, nếu không có chỉ dẫn nào khác.

VI SÓNG + NƯỚNG

Chế độ này kết hợp nhiệt bức xạ từ bộ phận nướng cộng với tốc độ của vi sóng để xử lý thực phẩm. Nó hoạt động khi cửa lò đã đóng và đĩa xoay đang xoay. Do có sự xoay của đĩa xoay, thực phẩm sẽ chín đều.

Có sự kết hợp của cả 3 chế độ trong mô hình này:

600 W + Nướng, 450 W + Nướng và 300 W + Nướng.

Dụng cụ nấu dùng cho chế độ kết hợp vi sóng + nướng

Hãy sử dụng những dụng cụ mà vi sóng có thể đi qua. Các dụng cụ này phải chịu lửa. Không sử dụng dụng cụ kim loại với chế độ kết hợp này. Không sử dụng bất kỳ loại dụng cụ nào bằng nhựa, vì chúng sẽ bị nóng chảy.

Thực phẩm phù hợp để nấu bằng vi sóng và nướng:

Thực phẩm phù hợp cho chế độ kết hợp này bao gồm tất cả các loại thực phẩm đã được nấu chín cần hâm nóng và làm chín (ví dụ như bánh ngọt nướng), cũng như những loại thực phẩm cần ít thời gian để làm chín phần bên trên của nó. Ngoài ra, chế độ này còn được sử dụng cho những miếng thực phẩm dày và làm cho thực phẩm mau chín và giòn (ví dụ như những miếng thịt gà, phải trở thực phẩm sau một nửa thời gian làm chín). Hãy tham khảo phần hướng dẫn sử dụng lò nướng để biết thêm chi tiết.

Các lưu ý quan trọng:

Khi chỉ sử dụng chế độ kết hợp (vi sóng + nướng), phải đảm bảo thiết bị đun nóng nằm ngang bên dưới mặt trên của khoang lò và vị trí đứng không sát thành sau cửa lò. Hãy nhớ rằng thực phẩm phải được đặt trên rế trên, nếu không có chỉ dẫn nào khác. Nếu không thì chúng phải được đặt trực tiếp trên đĩa xoay. Hãy tham khảo các hướng dẫn trong bảng sau. Thực phẩm phải được trở nếu nó cần được làm vàng cả hai bên.

Hướng dẫn nướng thực phẩm đông lạnh

Sử dụng các mức công suất và thời gian trong bảng này như một hướng dẫn nướng.

Thực phẩm tươi sống	Khẩu phần	Công suất	Thời gian mặt thứ 1 (phút)	Thời gian mặt thứ 2 (phút)	Hướng dẫn
Bánh mì tròn (mỗi miếng 50 g)	2 miếng 4 miếng	Vi sóng + Nướng	300 W+ Nướng 1½-2 2½-3	Chỉ nướng 2-3 2-3	Xếp bánh mì thành vòng tròn trên rế. Nướng mặt thứ hai đến độ giòn ưa thích. Chờ trong 2-5 phút.
Bánh mì baguette/ bánh mì tỏi nướng	200-250 g (1 miếng)	Vi sóng + Nướng	450W + Nướng 3½-4	Chỉ nướng 2-3	Đặt bánh mì baguette đông lạnh đã được bọc bằng giấy nướng trên rế. Sau khi nướng xong, hãy chờ từ 2-3 phút.
Gratin (rau cải hoặc khoai tây)	400 g	450 W + Nướng	13-15	-	Cho gratin đông lạnh vào một chén thủy tinh tròn chịu nhiệt. Đặt đĩa lên rế. Sau khi nấu xong, hãy chờ từ 2-3 phút.
Mì sợi (mì cannelloni, mì ống hoặc mì lasagne)	400 g	600 W + Nướng	14-16	-	Đổ mì ống vào trong đĩa thủy tinh hình chữ nhật nhỏ đẹp. Đặt đĩa trực tiếp lên đĩa xoay. Sau khi nấu xong, hãy chờ từ 2-3 phút.
Cá Gratin	400 g	450 W + Nướng	16-18	-	Đặt mì ống vào trong đĩa thủy tinh chịu nhiệt hình chữ nhật nhỏ, dẹt. Đặt đĩa trực tiếp lên đĩa xoay. Sau khi nấu xong, hãy chờ từ 2-3 phút.

Hướng dẫn nướng dành cho thực phẩm tươi sống

Sử dụng chức năng nướng để làm nóng lò nướng trong thời gian 4 phút. Sử dụng các mức công suất và thời gian trong bảng này như một hướng dẫn nướng.

Thực phẩm tươi sống	Khẩu phần	Công suất	Thời gian mặt thứ 1 (phút)	Thời gian mặt thứ 2 (phút)	Hướng dẫn
Các lát bánh mì nướng	4 miếng (mỗi miếng 25 g)	Chỉ nướng	3½-4½	3-4	Đặt những lát bánh mì kế nhau trên rế.
Bánh mì tròn (đã nướng)	2-4 miếng	Chỉ nướng	2½-3½	1½-2½	Đặt bánh mì tròn, với mặt đáy ngửa lên thành hình tròn trực tiếp lên đĩa xoay.
Cà chua nướng	200 g (2 miếng) 400 g (4 miếng)	300 W + Nướng	3½-4½ 5-6	-	Cắt cà chua làm đôi. Cho một ít pho mai lên trên. Xếp chúng thành một vòng tròn trên một đĩa thủy tinh chịu nhiệt. Đặt lên rế.
Bánh khoai tây-Pho mai nướng	4 miếng (300 g)	300 W + Nướng	4-5	-	Nướng các lát bánh mì trước. Đặt bánh mì phủ nguyên liệu lên rế. Chờ trong 2-3 phút.
Bánh mì nướng Hawaii (thơm, dăm bông và pho mai)	2 miếng (300 g) 4 miếng (600 g)	450 W + Nướng	3½-4 6-7	-	Nướng các lát bánh mì trước. Đặt bánh mì phủ nguyên liệu lên rế. Đặt 2 lát bánh mì đối diện nhau trực tiếp lên lò. Chờ trong 2-3 phút.
Khoai tây nướng	250 g 500 g	600 W + Nướng	4½-5½ 6½-7½	-	Cắt khoai tây làm đôi. Đặt khoai tây thành vòng tròn trên rế với mặt cắt gần vi nướng.
Khoai tây / rau Gratin (giữ lạnh)	500 g	450 W + Nướng	9-11	-	Đặt gratin tươi vào một đĩa thủy tinh chịu nhiệt. Đặt đĩa lên rế. Sau khi nấu xong, hãy chờ từ 2-3 phút.

Thực phẩm tươi sống	Khẩu phần	Công suất	Thời gian mặt thứ 1 (phút)	Thời gian mặt thứ 2 (phút)	Hướng dẫn
Miếng thịt gà	450 g (2 miếng) 650 g (2-3 miếng) 850 g (4 miếng)	300 W + Nướng	7-8 9-10 11-12	7-8 8-9 9-10	Phết dầu ăn và gia vị lên các miếng thịt gà. Đặt thành hình tròn với xương nằm giữa. Đặt thêm một miếng vào giữa rế. Chờ trong 2-3 phút.
Gà nướng	900 g 1100 g	450 W + Nướng	10-12 12-14	9-11 11-13	Phết dầu ăn và gia vị lên các miếng thịt gà. Đặt gà lên rế dưới với ức gà hướng xuống dưới, sau đó lật phần này hướng lên trên. Sau khi nướng xong, hãy chờ 5 phút.
Thịt cừu miếng (tái)	400 g (4 miếng)	Chỉ nướng	10-12	8-9	Tẩm dầu ăn và gia vị vào thịt. Xếp chúng thành vòng tròn đặt trên rế. Sau khi nướng xong, hãy chờ từ 2-3 phút.
Miếng thịt heo	250 g (2 miếng) 500 g (4 miếng)	Vi sóng + Nướng	300 W+ Nướng 6-7 8-10	Chỉ nướng 5-6 7-8	Tẩm dầu ăn và gia vị vào thịt. Sau đó đặt thành hình tròn trên rế. Sau khi nướng xong, hãy chờ từ 2-3 phút.
Cá đút lò	450 g 650 g	300 W + Nướng	6-7 7-8	7-8 8-9	Thoa dầu lên cả con cá và thêm rau thơm, gia vị. Đặt cá cạnh nhau (đầu con này kế đuôi con kia) trên rế.
Táo nướng	2 quả táo (khoảng 400 g) 4 quả táo (khoảng 800 g)	300 W + Nướng	6-7 10-12	-	Lấy lõi táo ra và nhồi vào trong táo bằng nạo khô và mút. Cho thêm vài lát hạnh đào lên trên. Đặt các quả táo này vào một đĩa cạnh bằng thủy tinh chịu nhiệt. Đặt đĩa thủy tinh trực tiếp lên đĩa xoay.

CÁC MẸO ĐẶC BIỆT

LÀM TAN BƠ

Cho 50 g bơ vào một đĩa thủy tinh nhỏ, sâu lòng. Đậy bằng nắp nhựa. Làm nóng trong vòng 30-40 giây với mức công suất 900 W cho đến khi bơ tan ra.

LÀM TAN SÔCÔLA

Cho 100 g sôcôla vào một đĩa thủy tinh nhỏ, sâu lòng. Làm nóng từ 3-5 phút, sử dụng mức công suất 450 W đến khi sôcôla tan ra. Khuấy một đến hai lần trong quá trình làm tan chảy. Sử dụng gang tay khi lấy ra!

LÀM TAN MẬT ONG KẾT TINH

Đặt 20 g mật ong kết tinh vào một đĩa thủy tinh nhỏ, sâu. Làm nóng trong vòng 20-30 giây với mức công suất 300 W cho đến khi mật ong tan ra.

LÀM TAN GELATINE

Đặt miếng gelatine khô (10 g) vào nước lạnh trong vòng 5 phút. Đặt gelatine đã được làm khô vào một bát thủy tinh nhỏ chịu nhiệt. Làm nóng trong vòng 1 phút với mức công suất 300 W. Khuấy sau khi làm tan gelatine.

NẤU GLAZE/KEM TRỨNG (ĐỂ LÀM BÁNH NGỌT VÀ BÁNH GATÔ)

Trộn glaze (khoảng 14 g) với 40 g đường và 250 ml nước lạnh. Nấu bằng chén thủy tinh chịu nhiệt không đậy nắp từ 3½ đến 4½ phút với mức công suất 900 W, cho đến khi glaze/kem trứng được trong suốt. Khuấy hai lần trong khi nấu.

LÀM MÚT

Đặt 600 g trái cây (ví dụ như dâu trộn) trong một bát thủy tinh chịu nhiệt kích thước phù hợp và có nắp đậy. Thêm 300 g đường và khuấy đều. Nấu đậy nắp trong vòng từ 10-12 phút với mức công suất 900 W. Khuấy nhiều lần trong khi nấu. Bỏ vào một lọ nhỏ bằng thủy tinh có nắp đậy dạng xoay. Để nắp đậy trong vòng 5 phút.

LÀM BÁNH PUDDING

Trộn bột pudding với đường và sữa (500 ml) trực tiếp theo hướng dẫn của nhà sản xuất và khuấy đều. Sử dụng một tô thủy tinh chịu nhiệt kích thước thích hợp và có nắp đậy. Nấu có đậy nắp sẽ cần từ 6½ đến 7½ phút với mức công suất 900 W. Khuấy nhiều lần trong khi nấu.

NƯỚNG HẠNH ĐÀO

Trái 30 g các lát hạnh đào vào một đĩa men có kích thước vừa. Đào vài lần trong khoảng 3½ đến 4½ phút với mức công suất 600 W. Để yên trong lò từ 2-3 phút. Sử dụng gang tay khi lấy ra!

VỆ SINH LÒ VI SÓNG

Các bộ phận sau đây của lò vi sóng cần được làm sạch thường xuyên để tránh dầu mỡ và các mẫu thực phẩm tích tụ lại:

- Bề mặt trong và ngoài
- Cửa lò và Đệm cửa lò
- Đĩa xoay và Vòng xoay

LUÔN LUÔN đảm bảo đệm cửa lò sạch sẽ và cửa được đóng đúng cách.

Không đảm bảo lò sạch thường xuyên có thể dẫn đến rỉ sét bề mặt, ảnh hưởng đến tuổi thọ của thiết bị và có thể gây nguy hiểm.


1. Làm sạch mặt ngoài lò bằng vải mềm, nước ấm pha xà bông. Lau nhẹ và làm khô ráo.
2. Loại bỏ bất kỳ vết bẩn nào ở mặt trong lò hay trên vòng xoay bằng vải có xà bông. Lau nhẹ và làm khô ráo.
3. Để loại bỏ các mẫu thực phẩm đã hóa cứng và khử mùi cho lò, hãy đặt một ly nước chanh pha loãng vào đĩa xoay và nấu trong vòng 10 phút ở công suất tối đa.
4. Rửa đĩa an toàn với máy rửa chén mỗi khi cần thiết.

KHÔNG ĐƯỢC làm đổ nước vào các lỗ thông hơi. **KHÔNG ĐƯỢC** sử dụng bất kỳ thiết bị tẩy rửa hay dung môi hóa học nào. Đặc biệt chú ý khi làm vệ sinh đệm cửa lò để đảm bảo không còn các dị vật rất nhỏ bám trên đệm cửa:

- Tích tụ
- Ngăn cản cửa lò đóng đúng cách

Làm sạch khoang lò vi sóng sau mỗi lần sử dụng bằng dung dịch tẩy nhẹ, nhưng hãy để lò nguội đi rồi mới tiến hành vệ sinh để tránh thương tổn.

Khi lau chùi phần trên phía trong khoang lò, nên hạ thiết bị đun nóng nghiêng một góc 45 ° để lau chùi.



BẢO QUẢN VÀ SỬA CHỮA LÒ VI SÓNG

Một vài khuyến cáo nên được lưu ý khi bảo quản và sửa chữa lò vi sóng của quý vị.

Phải ngưng sử dụng lò nếu cửa lò hay đệm cửa lò bị hư hỏng:

- Bản lề bị gãy
- Đệm cửa lò bị hỏng
- Khoang lò bị méo hay cong vênh

Chỉ nhân viên kỹ thuật được đào tạo mới được sửa chữa.

TUYỆT ĐỐI KHÔNG tháo vỏ bọc bên ngoài của lò. Nếu lò bị lỗi và cần sửa chữa hoặc quý vị cảm thấy nghi ngờ về tình trạng của lò:

- Rút dây nguồn của lò ra khỏi ổ cắm
- Liên hệ với dịch vụ hậu mãi gần nhất

Nếu quý vị không sử dụng lò trong một khoảng thời gian ngắn, hãy giữ lò ở một nơi khô ráo, sạch bụi.

Lý do: Bụi và hơi ẩm có thể ảnh hưởng xấu đến các bộ phận đang hoạt động của lò.

Lò vi sóng này không dùng cho mục đích thương mại.

CÁC THÔNG SỐ KỸ THUẬT

SAMSUNG luôn cố gắng cải tiến thiết bị của mình. Do đó các thông số mẫu mã cũng như hướng dẫn sử dụng sẽ được thay đổi mà không được thông báo.

Mẫu lò	GS109F
Nguồn điện	230 V ~ 50 Hz
Mức tiêu thụ năng lượng Vi sóng Nướng Chế độ kết hợp	1400 W 1300 W 2700 W
Công suất ra	100 W / 900 W (IEC-705)
Tần số hoạt động	2450 MHz
Magnetron	OM75P (31)
Phương pháp làm mát	Động cơ quạt làm mát
Kích thước (rộng x cao x sâu) Bên ngoài Khoang lò	512 x 297 x 435 mm 336 x 241 x 349 mm
Thể tích	28 lít
Trọng lượng Tĩnh	khoảng 16 kg



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300-362-603	www.samsung.com
NEW ZEALAND	0800-SAMSUNG (0800-726-786)	
CHINA	400-810-5858	
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	3030-8282 1800-3000-8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	
JAPAN	0120-327-527	
MALAYSIA	1800-88-9999	
PHILIPPINES	1-800-10-SAMSUNG (726-7864) 1-800-3-SAMSUNG (726-7864) 1-800-8-SAMSUNG (726-7864) 02-5805777	
SINGAPORE	1800-SAMSUNG(726-7864)	
THAILAND	1800-29-3232 02-689-3232	
TAIWAN	0800-329-999	
VIETNAM	1-800-588-889	

Mã số: DE68-03819E



GS109F

Microwave Oven

Owner's Instructions & Cooking Guide



This manual is made with 100 % recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.
Please register your product at

www.samsung.com/register





CONTENTS

Quick look-up guide	2
Oven	3
Control panel	4
Accessories	4
Using this instruction booklet	5
Important safety information	5
Legend for symbols and icons	5
Precaution to avoid possible exposure to excessive microwave energy	5
Important safety instructions	6
Installing your microwave oven	9
Setting the time	9
What to do if you are in doubt or have a problem	10
Cooking/Reheating	10
Power levels	11
Adjusting the cooking time	11
Stopping the cooking	11
Setting the energy save mode	11
Using the steam cleaning	12
Using the auto reheat/Cook feature	12
Auto reheat/Cook settings	13
Using the auto power defrost feature	13
Auto power defrost settings	14
Using the sensor cook feature	14
Sensor cook settings	15
Using the auto crusty cook function	17
Auto crusty cook settings	17
Using the manual crusty cook function	18
Manual crusty cook settings	18
Choosing the heating element position	19
Choosing the accessories	19
Grilling	20
Combining microwaves and the grill	20
Switching the beeper off	21
Safety-locking your microwave oven	21
Cookware guide	21
Cooking guide	22
Cleaning your microwave oven	31
Storing and repairing your microwave oven	31
Technical specifications	32

QUICK LOOK-UP GUIDE

If you want to cook some food.

1. Place the food in the oven.
Select the power level by pressing the  button one or more times.



Vi sóng

2. Set the cooking time by pressing the (←) and (→) buttons as required.



3. Press the  button.

Result : Cooking starts. The oven beeps four times when cooking is over.



Bắt đầu / +30 giây

If you want to auto Rapid defrost some food.

1. Place the frozen food in the oven.
Select the type of food that you are cooking by pressing the **Power Defrost** () button one or more times.



Rã đông nhanh

2. Select the food weight by pressing the (←) and (→) buttons.



3. Press the  button.



Bắt đầu / +30 giây

If you want to add extra 30 seconds.

Leave the food in the oven.
Press **+30s** one or more times for each extra 30 seconds that you wish to add.



Bắt đầu / +30 giây

If you want to grill some food.

1. Press the  button.




2. Set the cooking time by pressing the (—) and (+) buttons.



3. Press the  button




OVEN

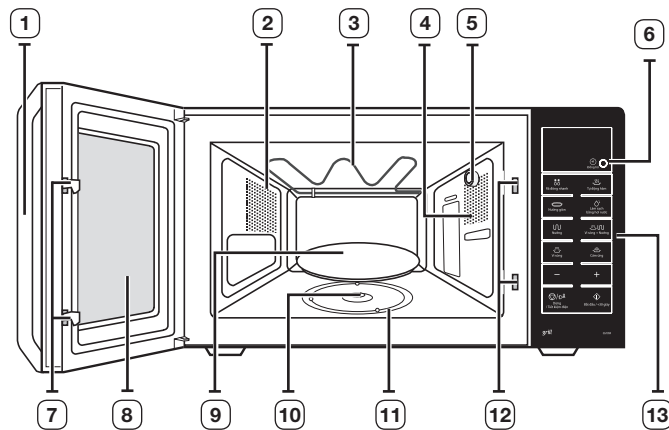

- | | |
|----------------------|----------------------------|
| 1. DOOR HANDLE | 8. DOOR |
| 2. VENTILATION HOLES | 9. TURNTABLE |
| 3. GRILL | 10. COUPLER |
| 4. LIGHT | 11. ROLLER RING |
| 5. WATER BOWL HOLDER | 12. SAFETY INTERLOCK HOLES |
| 6. DISPLAY | 13. CONTROL PANEL |
| 7. DOOR LATCHES | |

ENGLISH

CONTROL PANEL

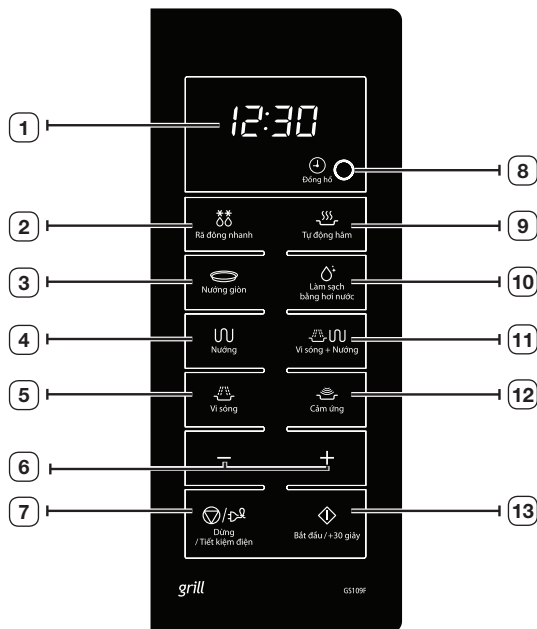

- | | |
|--|--------------------------------|
| 1. DISPLAY | 7. STOP/ENERGY SAVE BUTTON |
| 2. AUTO POWER DEFROST FEATURE | 8. CLOCK SETTING |
| 3. AUTO CRUSTY COOK SELECTION | 9. AUTO REHEAT SELECTION |
| 4. GRILL MODE SELECTION | 10. STEAM CLEAN BUTTON |
| 5. MICROWAVE/ POWER LEVEL MODE SELECTION | 11. COMBI MODE SELECTION |
| 6. UP (+) / DOWN (-) BUTTON (Cook time, Weight and serving size) | 12. SENSOR COOK MODE SELECTION |
| | 13. START BUTTON |

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

- Coupler**, already placed over the motor shaft in the base of the oven.

Purpose : The coupler rotates the turntable.




- Roller ring**, to be placed in the center of the oven.

Purpose : The roller ring supports the turntable.



- Turntable**, to be placed on the roller ring with the center fitting to the coupler.

Purpose : The turntable serves as the main cooking surface; it can be easily removed for cleaning.




- Grill rack**, to be placed on the turntable.

Purpose : The metal rack can be used in grill and combination cooking.



- Crusty plate**, see page 17 to 18.

Purpose : The crusty plate when using auto crusty cook function or manual crusty cook function.



- Clean Water Bowl**, see page 12.

Purpose : The water bowl can be used to clean.



-  **DO NOT** operate the microwave oven without the roller ring and turntable.



USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

IMPORTANT SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Before using the oven, confirm that the following instructions are followed.

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

LEGEND FOR SYMBOLS AND ICONS



WARNING

Hazards or unsafe practices that may result in **severe personal injury or death**.



CAUTION

Hazards or unsafe practices that may result in **minor personal injury or property damage**.



Warning; Fire hazard



Warning; Hot surface



Warning; Electricity



Warning; Explosive material



Do NOT attempt.



Follow directions explicitly.



Do NOT disassemble.



Unplug the power plug from the wall socket.



Do NOT touch.



Make sure the machine is grounded to prevent electric shock.



Call the service center for help.



Note



Important

PRECAUTION TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- (a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- (b) Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

- (c) Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:

- (1) door (bent)
- (2) door hinges (broken or loose)
- (3) door seals and sealing surfaces

- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

IMPORTANT SAFETY INSTRUCTIONS

Make sure that these safety precautions are obeyed at all times.

 WARNING    				
 Only qualified staff should be allowed to modify or repair the microwave oven.	✓	✓	✓	✓
 Do not heat liquids and other food in sealed containers.	✓	✓	✓	✓
 For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓
 Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓
 This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓

 Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓
 Do not pull or excessively bend or place heavy object on the power cord.	✓	✓	✓	✓
 In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
 Do not touch the power plug with wet hands.	✓	✓	✓	✓
 Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
 Do not insert fingers or foreign substances, if any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
 Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
 Do not place the oven over a fragile object such as a sink or glass object. (Counter top model only)	✓	✓		
 Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
 Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
 Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
 Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
 Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓
 Appliances are not intended to be operated by means of an external timer or separate remote-control system.	✓	✓		
 Do not pour or directly spray water onto the oven.	✓	✓		



☐	Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓
☐	Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓	
★	Children should be supervised to ensure that they do not play with the appliance	✓	✓	✓
☐	The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.	✓	✓	✓
☐	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓
☐	The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet. (Counter top model only)	✓	✓	✓
★	WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.	✓	✓	✓
★	WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.	✓	✓	✓
★	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.	✓	✓	✓
☐	WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.	✓	✓	✓
☐	WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.	✓	✓	✓

☐	WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.	✓	✓	✓
☐	WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.	✓		✓
☐	WARNING: Accessible parts may become hot during use. To avoid burns young children should be kept away.	✓		✓
★	WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: - Immerse the scalded area in cold water for at least 10 minutes. - Cover with a clean, dry dressing. - Do not apply any creams, oils or lotions.	✓	✓	✓
★	During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.	✓		✓
★	WARNING: The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;		✓	
★	The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.	✓	✓	✓
★	This oven should be positioned proper direction and height permitting easy access to cavity and control area.	✓	✓	✓
★	Before using the your oven first time, oven should be operated with the water during 10 minute and then used.	✓	✓	✓

★	This microwave oven has to be positioned so that plug is accessible. If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.	✓	✓	✓	✓
□	During cleaning conditions the surfaces may get hotter than usual and children should be kept away (Cleaning function model only)		✓	✓	
□	Excess spillage must be removed before cleaning and utensils which state in cleaning manual can be left in the oven during cleaning. (Cleaning function model only)	✓	✓	✓	✓
★	Appliance should allow to disconnection of the appliance from the supply after installation. The disconnection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules. (Built-in model only.)	✓	✓	✓	✓
⚠ CAUTION		⚠	⚡	🔥	👤
★	Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
★	When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;	✓		✓	
□	Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
★	Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
👤	If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;	✓		✓	✓
★	The oven should be cleaned regularly and any food deposits removed;	✓	✓		✓
□	Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		


□	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts inshells, tomatoes etc.		✓	✓
□	Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓	✓	
👤	Always use oven mitts when removing a dish from the oven to avoid unintentional burns.		✓	
👤	Do not touch heating elements or interior oven walls until the oven has cooled down.		✓	
★	Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.		✓	
★	Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.		✓	
□	Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓		✓
□	Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.	✓		✓
★	Install the oven in compliance with the clearances stated in this manual (see Installing Your Microwave Oven)	✓	✓	
★	Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓




INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

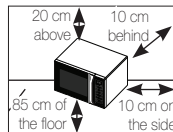

2. Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.

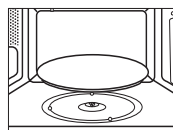

3. This microwave oven has to be positioned so that plug is accessible.
-  If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent. For your personal safety, plug the cable into a 3-pin, 230 Volt, 50 Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable.
 -  Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, “:00”, “88:88” or “12:00” is automatically displayed on the display. Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

-  Do not forget to reset the clock when you switch to and from summer and winter time.

1. To display the time in the...


24-hour notation
12-hour notation

Then press the  button...

Once
Twice




2. Press the (—) and (+) buttons to set the hour.



3. Press the  button.



4. Press the (—) and (+) buttons to set the minute.



5. Press the  button.



WHAT TO DO IF YOU ARE IN DOUBT OR HAVE A PROBLEM

If you have any of the problems listed below try the solutions given.

This is normal.

- Condensation inside the oven
- Air flow around the door and outer casing
- Light reflection around the door and outer casing
- Steam escaping from around the door or vents

The oven does not start when you press the button.

- Is the door completely closed?

The food is not cooked at all

- Have you set the timer correctly and/or pressed the  button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

Sparkling and cracking occur inside the oven (arcing)

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

The oven causes interference with radios or televisions

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

 If the above guidelines do not enable you to solve the problem, contact your local dealer or SAMSUNG after-sales service.

COOKING/REHEATING

The following procedure explains how to cook or reheat food.

ALWAYS check your cooking settings before leaving the oven unattended. First, place the food in the centre of the turntable. Then, close the door.

1. Press the  button.

Result : The 900 W (maximum cooking power) indications are displayed:
Select the appropriate power level by pressing the  button again until the corresponding wattage is displayed. Refer to the power level table.



2. Set the cooking time by pressing the  and  buttons as required.



3. Press the  button.

Result : The oven light comes on and the turntable starts rotating.

- 1) Cooking starts and when it has finished the oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.



Bắt đầu / +30 giây

 **Never** switch the microwave oven on when it is empty.

 If you wish to heat a dish for a short period of time at maximum power (900 W), simply press the **+30s** button once for each 30 seconds of cooking time. The oven starts immediately.



POWER LEVELS

You can choose among the power levels below.

Power level	Output	
	MWO	GRILL
HIGH	900 W	-
MEDIUM HIGH	600 W	-
MEDIUM	450 W	-
MEDIUM LOW	300 W	-
DEFROST (❄️)	180 W	-
LOW/KEEP WARM	100 W	-
GRILL	-	1300 W
COMBI I (🔥🍷)	600 W	1300 W
COMBI II (🔥🍷)	450 W	1300 W
COMBI III (🔥🍷)	300 W	1300 W

- ☑ If you select higher power level, the cooking time must be decreased.
- ☑ If you select lower power level, the cooking time must be increased.

ADJUSTING THE COOKING TIME

You can increase the cooking time by pressing the +30s button once for each 30 seconds to be added.

Press the **+30s** button once for each 30 seconds to be added.




Bắt đầu / +30 giây

STOPPING THE COOKING

You can stop cooking at any time to check the food.

1. To stop temporarily;
Open the door.

Result : Cooking stops. To resume cooking, close the door and press again.



2. To stop completely;
Press the button.

Result : The cooking stops.



Dừng
/ Tiết kiệm điện

- You can also cancel any setting before starting by simply pressing **Stop** ().

SETTING THE ENERGY SAVE MODE

The oven has an Energy save mode. This facility saves electricity when the oven is not in use.

- Press the Energy save button.
- To remove Energy save mode, open the door and then display shows "0". The oven is ready for use.



Dừng
/ Tiết kiệm điện


USING THE STEAM CLEANING

The steam provided by steam clean system will soak the cavity surface. After using steam clean function, you can easily clean the cavity of oven.

☐ Use this function only after the oven has completely cooled. (Room temperature)

☐ Use normal water only, and no distilled water.


1. Open the door.



2. Fill with water following guide line(water level) outside the water bowl. (The line is about 50 ml).




3. Insert water bowl into upper water bowl holder on the right wall of cooking chamber.




4. Close the door.


5. Press the **Steam Clean** (☐) button. It can be seen **Misty** during steam cleaning but it is not a defect **But Steam Shields The light Inside**.



6. Open the door.



7. Please clean cavity of oven with dried dishtowel. Remove the turntable and only under rack with kitchen paper.



Warning!

- Water Bowl only can be use during “**Steam Clean**” mode.
- When cooking non-liquid items, remove water bowl because It will damage and cause fire to the microwave oven.

USING THE AUTO REHEAT/COOK FEATURE

The Auto reheat/Cook feature has four pre-programmed cooking time. You do not need to set either the cooking times or the power level. You can adjust the number of servings by pressing the (←) and (→) buttons. First, place the food in the centre of the turntable and close the door.

1. Select the type of food that you are cooking by pressing the **Auto Reheat/Cook** (☐) button once or more times.




2. Select the size of the serving by pressing the (←) and (→) buttons. (Refer to the table on the side).



3. Press the (☐) button.

Result :

- Cooking starts. When it has finished.
- 1) The oven beeps four times.
 - 2) The end reminder signal will beep 3 times (once every minute).
 - 3) The current time is displayed again.



☐ Use only recipients that are microwave-safe.



AUTO REHEAT/COOK SETTINGS

The following table presents 4 Auto Reheat/ Cook Programmes, quantities, standing times and appropriate recommendations. Programmes no 1 and 2 are running with microwave energy only. Programmes no 3 and 4 are running with a combination of microwaves and grill. Use oven gloves while taking out!

Code/Food	Portion	Standing time (min.)	Recommendations
1. Ready Meal (Chilled) 	300-350 g 400-450 g 500-550 g	3	Put on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta).
2. Popcorn 	100-150 g	-	Use special popcorn product for preparing in microwave oven. Follow the instructions of food manufacturer and put the bag in the centre of turntable. During this programme corn will pop and the bag will increase in volume. Be careful when taking out and opening the hot bag.
3. Chicken Pieces 	200-300 g (1 pc) 400-500 g (2 pcs) 600-700 g (3 pcs) 800-900 g (3-4 pcs)	2-3	Brush the chicken pieces with oil and spice them with pepper, salt and paprika. Put them in a circle on the high rack with the skin-side down. Turn over, as soon as the beep sounds.
4. Frozen Bread Rolls 	100-150 g (2 pcs) 200-250 g (4 pcs) 300-350 g (6 pcs)	3-5	Put 2 to 6 frozen bread rolls (-18 °C) in a circle on the low rack. Put 8 frozen bread rolls equally on the low and high rack. This program is suitable for small frozen bakery products as bread rolls and small baguettes.

USING THE AUTO POWER DEFROST FEATURE

The Auto Rapid Defrost feature enables you to defrost meat, poultry, fish and bread/cake. The defrost time and power level are set automatically. You simply select the programme and the weight.

 Use only dishes that are microwave-safe.

First, place the frozen food in the centre of the turntable and close the door.

- Select the type of food that you are cooking by pressing the **Power Defrost** (**) button one or more times. (Refer to the table on the side).




- Select the food weight by pressing the (−) and (+) buttons. It is possible to set up to a maximum of 2000 g. (Bread/Cake is possible to set up to a maximum of 1000 g.)



- Press the  button.

Result :

- Defrosting begins.
- The oven beeps half way through defrosting to remind you to turn the food over.
- Press  button again to finish defrosting.



 You can also defrost food manually. To do so, select the microwave cooking/reheating function with a power level of 180 W. Refer to the section entitled "Cooking/Reheating" on page 10 for further details.



AUTO POWER DEFROST SETTINGS

The following table presents the various Auto Power Defrost programmes, quantities, standing times and appropriate recommendations.

Remove all kinds of package material before defrosting. Place meat, poultry, fish and bread/cake on a ceramic plate.

Code/ Food	Serving size	Standing time	Recommendations
1. Meat 	200-2000 g	20-60 min.	Shield the edges with aluminium foil. Turn the meat over when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops and minced meat.
2. Poultry 	200-2000 g	20-60 min.	Shield the leg and wing tips with aluminium foil. Turn the poultry over when the oven beeps. This programme is suitable for whole chicken and chicken portions.
3. Fish 	200-2000 g	20-50 min.	Shield the tail of the whole fish with aluminium foil. Turn the fish over when the oven beeps. This programme is suitable for whole fishes and fish fillets.
4. Bread/ Cake 	125-1000 g	5-20 min.	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door. This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not, suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping.

-  Select the Manual Defrosting function with a power level of 180 W if you want to defrost food manually. For further details on manual defrosting and defrosting time, refer to the page 27.

USING THE SENSOR COOK FEATURE

The Eight Sensor Cook features include/provide pre-programmed cooking times.

You do not need to set either the cooking times or the power level. You can adjust the Sensor Cook category by pressing the (←) and (→) buttons.

First, place the food in the center of the turntable and close the door.

-  Use only dishes that are microwave-safe.

1. Select the type of food that you are cooking by pressing the **Sensor Cook** () button one or more times. (Refer to the table on the side).



2. Press the  button.

Result :

Cooking starts. When it has finished.

- 1) The oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

-  Use only recipients that are microwave-safe.



Bắt đầu / +30 giây

SENSOR COOK SETTINGS

The following table presents 8 Sensor Cook Programmes. It contains its recommended weight range per item, standing times after cooking and appropriate recommendations. After you start the programme cooking times and power levels are calculated automatically. The cooking process is controlled by the sensor system for your convenience. Use oven gloves while taking out!

Code/Food	Serving size	Standing time (min.)	Recommendations
1. Broccoli florets 	200-500 g	1-2	Wash and clean broccoli and prepare florets. Put them evenly into a glass bowl with lid. Add 30-45 ml water (2-3 tablespoons). Put bowl in the centre of turntable. Cook covered. Stir after cooking.
2. Sliced carrots 	200-500 g	1-2	Wash and clean carrots and cut into round slices evenly. Put them into a glass bowl with lid. Add 30-45 ml water (2-3 tablespoons). Put bowl in the centre of turntable. Cook covered. Stir after cooking.
3. Peeled potatoes 	200-800 g	2-3	Wash and peel the potatoes and cut into a similar size. Put them into a glass bowl with lid. Add 45-60 ml (3-4 tablespoons) water. Put bowl in the centre of turntable. Cook covered.
4. Jacket potatoes 	200-800 g	3-5	Wash and clean potatoes and pierce with a fork. Put potatoes, (each about 200 g) in a circle on the turntable.

Code/Food	Serving size	Standing time (min.)	Recommendations
5. Drinks (coffee, milk, tea, water with room temperature) 	150-250 g (1 cup or 1 mug)	1-2	Pour the liquid into ceramic cup or mugs and reheat uncovered. Place in the centre of turntable. Leave them to stand in the microwave oven. Stir drinks before and after standing time. Be careful while taking the cups out (see safety instructions for liquids).
6. Soup/Sauce (chilled) 	250-500 g	2-3	Pour into a deep ceramic plate or bowl and cover with plastic lid during heating. Put soup in the centre of turntable. Stir carefully before and after standing time.
7. Frozen soup (-18 °C) 	250-500 g	2-3	Pierce film of frozen soup and put in the centre of turntable. Put soup in the centre of turntable. Stir carefully before and after standing time.
8. Frozen ready meal (-18 °C) 	300-500 g	3-4	Pierce film of frozen ready meal. Put meal in the centre of turntable. This programme is suitable for meals consisting of 2 components (e.g. meat with sauce and rice).



Auto Sensor Cooking Instructions

The Auto Sensor allows you to cook your food automatically by detecting the amount of gases generated from the food while cooking.

- When cooking food, many kinds of gases are generated. The Auto Sensor determines the proper time and power level by detecting these gases from the food, eliminating the need to set the cooking time and power level.
- When you cover a container with its lid or plastic wrap during Sensor Cooking, the Auto Sensor will detect the gases generated after the container has been saturated with steam.
- Shortly before cooking ends, the remaining cooking time will begin its count down. This will be a good time for you to rotate or stir the food for even cooking if it is necessary.
- Before auto sensor cooking food may be seasoned with herbs, spices or browning sauces. A word of caution though, salt or sugar may cause burn spots on food so these ingredients should be added after cooking.
- The More/Less function pad is used to increase or decrease cooking time. You should use this function to adjust the degree of cooking to suit your personal taste. Utensils & Cover For Sensor Cooking.
- To obtain good cooking results with this function, follow the directions for selecting appropriate containers and covers in the charts in this book.
- Always use microwave-safe containers and cover them with their lids or with plastic wrap. When using plastic wrap, turn back one corner to allow steam to escape at the proper rate.
- Always cover with the lid intended for the utensil being used. If the utensil does not have its own lid, use plastic wrap.
- Fill containers at least half full.
- Foods that require stirring or rotating should be stirred or turned toward the end of the Sensor Cook cycle, after the time has started to count down on the display.

Utensils & Cover For Sensor Cooking

- To obtain good cooking results with this function, follow the directions for selecting appropriate containers and covers in the charts in this book.
- Always use microwave-safe containers and cover them with their lids or with plastic wrap. When using plastic wrap, turn back one corner to allow steam to escape at the proper rate.
- Always cover with the lid intended for the utensil being used. If the utensil does not have its own lid, use plastic wrap.
- Fill containers at least half full.
- Foods that require stirring or rotating should be stirred or turned toward the end of the Sensor Cook cycle, after the time has started to count down on the display.

Important

- After installing the oven and plugging into an electrical outlet, do not unplug the power cord. The gas sensor needs time to stabilize in order to cook satisfactorily.
 - It is not advisable to use the auto sensor cooking feature on a continuous cooking operation, i.e. one cooking operation immediately after another.
 - Install the oven in a well ventilated location for proper cooling and airflow and to ensure the sensor will operate accurately.
 - To avoid poor results, do not use the Auto sensor when the room ambient temperature is too high or too low.
 - Do not use volatile detergent to clean your oven. Gas resulting from this detergent may affect the sensor.
 - Avoid placing the oven near high moisture or gas emitting appliances, since this will interfere with the proper performance of the Auto Sensor.
 - Always keep the inside of the oven clean. Wipe all spills with a damp cloth.
- This oven is designed for household use only.




USING THE AUTO CRUSTY COOK FUNCTION

With the Auto Crusty Cook feature, the cooking time is set automatically. You can adjust the number of servings by pressing the (←) and (→) buttons.


First, place the crusty plate in the centre of the turntable and close the door.

1. Place the crusty plate directly on the turntable and preheat it with highest Microwave-Grill-Combination. By pressing the **Combi** (🔥🌀) button and set the preheat time (3 to 5 minutes) by pressing the (←) and (→) buttons.




2. Press the ⏏ button.

🔊 Always use oven gloves to take out the crusty plate, as it will become very hot.



3. Open the oven door.
Place the food on the crusty plate.
Close the door.



🔍 Place the crusty plate on the metal rack (or turntable) in the microwave.

4. Select the type of food that you are cooking by pressing the **Crusty Cook** (🍷) button once or more times.




5. Select the size of the serving by pressing the (←) and (→) buttons. (Refer to the table on the side)



6. Press the ⏏ button.

Result : Cooking start. When it has finished.

- 1) The oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.



🔍 How to clean the Crusty Plate

Clean the crusty plate with warm water and detergent and rinse off with clean water. Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.

🔍 **Please Note:** The crusty plate is not dishwasher-safe.

AUTO CRUSTY COOK SETTINGS

The following table presents the various Auto Programmes of the Crisp function, quantities, standing times and appropriate recommendations. These Programmes are running with a combination of microwaves and grill. Before using the Crisp function, we recommend to preheat the crusty plate on the turntable for 3 to 5 minutes, using a combination of 600 W and grill. Use oven gloves while taking out!


Code/Food (-18 °C)	Serving size	Preheating time (min.)	Standing time (min.)	Recommendations
1. Frozen Pizza ***🍷	200 g 300 g 400 g 500 g	5	-	Preheat the crusty plate using 600 W + grill. Put frozen pizza on crusty plate. Put crusty plate on rack.
2. Frozen Baguettes ***🍷	150 g (1 pc) 250 g (2 pcs) 350 g (3 pcs)	4	2-3	Preheat the crusty plate using 450 W + grill. Put one frozen baguette offcenter on crusty plate, put 2 frozen baguettes side by side on the crusty plate. This programme is suitable for baguettes with topping, e.g. vegetables, ham and cheese.
3. Frozen Quiche/Pie ***🍷	150 g (1 pc) 300 g (1-2 pcs) 450 g (1-2 pcs)	3	1-2	Preheat the crusty plate using 600 W + grill. Put frozen quiche/ pie on crusty plate. Put crusty plate on rack.
4. Frozen Chicken Nuggets ***🍷	250 g 500 g	4	-	Preheat the crusty plate using 600 W + grill. Brush crusty plate with 1-2 tbsp. oil. Distribute frozen chicken nuggets evenly on crusty plate. Turn over when the oven beeps. Push start button to continue cooking.

USING THE MANUAL CRUSTY COOK FUNCTION

This crusty plate allows you to brown food not only on the top with the grill, but also the bottom of the food turns crispy and brown due to the high temperature of the crusty plate. Several items which you can prepare on the crusty plate can be found in the chart (see next page).

The crusty plate can also be used for bacon, eggs, sausages, etc.

1. Place the crusty plate directly on the turntable and preheat it with highest Microwave-Grill-Combination [600 W + Grill (🔥🌀)] by following the times and instructions in the chart.



- ☑ Always use oven gloves to take out the crusty plate, as will become very hot.

2. Brush the plate with oil if you are cooking food, such as bacon and eggs, in order to brown the food nicely.


- ✍ Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.

- ✍ Use plastic accessories to avoid scratches on the surface of the crusty plate or remove the food from the plate before cutting.


3. Place the food on the crusty plate.

- ☑ Do not place any objects on the crusty plate that are not heat-resistant; e.g. plastic bowls.

- ☑ Never place the crusty plate in the oven without turntable.



4. Place the crusty plate on the metal rack (or turntable) in the microwave.



5. Select the appropriate cooking time and power. Refer to the table on the next page.

How to clean the Crusty Plate

Clean the crusty plate with warm water and detergent and rinse off with clean water.

- ✍ Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.

Please Note

The crusty plate is not dishwasher-safe.

MANUAL CRUSTY COOK SETTINGS

We recommend to preheat the crusty plate directly on the turn-table.

Preheat the crusty plate with the 600 W + Grill (🔥🌀) function and follow the times and instructions in the table.

Food	Portion	Power	Preheating time (min.)	Cooking time (min.)	Recommendations
Bacon	4 slices (80 g) 8 slices (160 g)	600 W + Grill	3	3-3½ 4½-5	Preheat crusty plate. Put slices side by side on crusty plate. Put crusty plate on the rack.
Grilled tomatoes	200 g (2 pcs) 400 g (4 pcs)	450 W + Grill	3	3 4	Preheat crusty plate. Cut tomatoes in halves. Put some cheese on top. Arrange in a circle on crusty plate. Put crusty plate on the rack.
Burger (frozen)	2 pieces (125 g) 4 pieces (250 g)	600 W + Grill	3	6-6½ 8-8½	Preheat crusty plate. Put frozen burger in a circle on crusty plate. Put crusty plate on the rack. Turn over after 4-5 min.
Mini pizza (chilled)	100-150 g 200-250 g	600 W + Grill	5	3-3½ 4-4½	Preheat crusty plate. Put the chilled pizza pieces in a circle on the plate. Set crusty plate on the rack.




Food	Portion	Power	Preheat- ing time (min.)	Cooking time (min.)	Recommendations
Oven chips (frozen)	200 g	450 W + Grill	4	9	Preheat crusty plate. Distribute oven chips on crusty plate. Put the plate on the rack. Turn over after half of cooking time.
	300 g			12	
	400 g			15	
Baked potatoes	250 g 500 g	600 W + Grill	4	4½-5 7-7½	Preheat crusty plate. Cut potatoes in halves. Put them on the crusty plate with the cut side to the bottom. Arrange in a circle. Put the plate on the rack.
Fish fingers (frozen)	150 g (5 pcs)	600 W + Grill	4	6-6½	Preheat crusty plate. Brush plate with 1 tbsp. oil. Put fish fingers in a circle on the plate. Turn over after 3½ min. (5 pcs) or after 5 min. (10 pcs).
	300 g (10 pcs)			8½-9	

CHOOSING THE HEATING ELEMENT POSITION


The heating element is used when grilling. There is only one position listed. We need to tell consumers when it should be placed in the vertical position.

- Horizontal position for grilling or combined microwave + grill cooking

 Only change the position of the heating element when it is cold and do not apply excessive force when placing it in the vertical position.

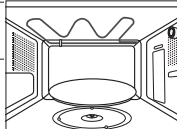To set the heating element to the...	Then...	
Horizontal position (grill or combined microwave + grill).	- Pull the heating element towards you. - Push it upwards until it is parallel with the roof of the oven.	


When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it.

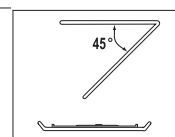

CHOOSING THE ACCESSORIES

Use microwave-safe recipients; do not use plastic containers, dishes, paper cups, towels, etc.

If you wish to select the combined cooking mode (grill and microwave), use only dishes that are microwave-safe and ovenproof.




 For further details on suitable cookware and utensils, refer to the Cookware Guide on page 21-22.


GRILLING

The grill enables you to heat and brown food quickly, without using microwaves. For this purpose, a grill rack is supplied with your microwave oven.


1. Preheat the grill to the required temperature, by pressing the  button and set the preheat time by pressing the (—) and (+) buttons.



2. Press the  button.



3. Open the door and place the food on the rack. Close the door.



4. Press the  button.

Result : The following indications are displayed:




5. Set the Grilling time by pressing the (—) and (+) buttons. The maximum grilling time is 60 minutes.



6. Press the  button.

Result : Grilling cooking start. When it has finished.

- 1) The oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.



-  Do not worry if the heater turns off and on while grilling. This system is designed to prevent overheating of the oven.


-  Always use oven gloves when touching the dishes in the oven, as they will be very hot. Check that the heating element is in the horizontal position.

COMBINING MICROWAVES AND THE GRILL


You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

-  **ALWAYS** use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
-  **ALWAYS** use oven gloves when touching the recipients in the oven, as they will be very hot.

1. Make sure that the heating element is in the horizontal position; refer page 19 for further details.



2. Open the oven door. Place the food on the rack and the rack on the turntable. Close the door.



3. Press the **Combi** () button.

Result : The following indications are displayed:

 (microwave and grill mode)
600 W (out power)



-  Select the appropriate power level by pressing the **Combi** () button again until the corresponding power level is displayed.

-  You cannot set the temperature of the grill.


4. Set the Cooking time by pressing the (—) and (+) buttons. The maximum grilling time is 60 minutes.



5. Press the  button.

Result : Combination cooking starts. When it has finished.

- 1) The oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.



-  The maximum microwave power for the combined microwave and grill mode is 600 W.




SWITCHING THE BEEPER OFF

You can switch the beeper off whenever you want.

1. Press the and buttons at the same time.

Result :


- The following indication is displayed.
- The oven does not beep each time you press a button.



2. To switch the beeper back on, press the and buttons again at the same time.

Result :

- The following indication is displayed.
- The oven operates with the beeper on again.



SAFETY-LOCKING YOUR MICROWAVE OVEN

Your microwave oven is fitted with a special Child Safety programme, which enables the oven to be “locked” so that children or anyone unfamiliar with it cannot operate it accidentally.

The oven can be locked at any time.

1. Press the and buttons at the same time.

Result :

- The oven is locked (no functions can be selected).
- The display shows “L”.



2. To unlock the oven, press the and buttons again at the same time.

Result : The oven can be used normally.



COOKWARE GUIDE

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry. The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminum foil	✓ X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than eight minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	X	May catch fire.
• Recycled paper or metal trims	X	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.



Cookware	Microwave-Safe	Comments
Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal - Dishes - Freezer bag twist ties	✗ ✗	May cause arcing or fire.
Paper - Plates, cups, napkins and Kitchen paper - Recycled paper	✓ ✗	For short cooking times and warming. Also to absorb excess moisture. May cause arcing.
Plastic - Containers - Cling film - Freezer bags	✓ ✓ ✓ ✗	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic. Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape. Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended

✓ ✗ : Use Caution

✗ : Unsafe

COOKING GUIDE

MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.

The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

COOKING

Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.



Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer. Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Spinach	150 g	600 W	5-6	2-3	Add 15 ml (1 tablespoon) cold water.
Broccoli	300 g	600 W	8-9	2-3	Add 30 ml (2 tbsp.) cold water.
Peas	300 g	600 W	7-8	2-3	Add 15 ml (1 tbsp.) cold water.
Green beans	300 g	600 W	7½-8½	2-3	Add 30 ml (2 tbsp.) cold water.
Mixed vegetables (carrots/peas/corn)	300 g	600 W	7-8	2-3	Add 15 ml (1 tbsp.) cold water.
Mixed vegetables (chinese style)	300 g	600 W	7½-8½	2-3	Add 15 ml (1 tbsp.) cold water.

Cooking Guide for rice and pasta

Rice : Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered. After the cooking time is over, stir before standing time and salt or add herbs and butter. Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta : Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered. Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
White rice (parboiled)	250 g	900 W	15-16	5	Add 500 ml cold water.
	375 g		17½-18½		Add 750 ml cold water.
Brown rice (parboiled)	250 g	900 W	20-21	5	Add 500 ml cold water.
	375 g		22-23		Add 750 ml cold water.
Mixed rice (rice + wild rice)	250 g	900 W	16-17	5	Add 500 ml cold water.
Mixed corn (rice + grain)	250 g	900 W	17-18	5	Add 400 ml cold water.
Pasta	250 g	900 W	10-11	5	Add 1000 ml hot water.



Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended - see table. Cook covered for the minimum time - see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint: Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

All fresh vegetables should be cooked using full microwave power (900 W).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Broccoli	250 g	3½-4	3	Prepare even sized florets. Arrange the stems to the centre.
	500 g	6-7		
Brussels sprouts	250 g	5-5½	3	Add 60-75 ml (5-6 tbsp.) water.
Carrots	250 g	3½-4	3	Cut carrots into even sized slices.
Cauliflower	250 g	4-4½	3	Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre.
	500 g	6½-7½		
Courgettes	250 g	3-3½	3	Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender.
Egg plants	250 g	2½-3	3	Cut egg plants into small slices and sprinkle with 1 tablespoon lemon juice.
Leeks	250 g	3-3½	3	Cut leeks into thick slices.
Mushrooms	125 g	1-1½	3	Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving.
	250 g	2-2½		

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Mushrooms	125 g	1-1½	3	Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving.
	250 g	2-2½		
Onions	250 g	5-5½	3	Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water.
Pepper	250 g	4-4½	3	Cut pepper into small slices.
Potatoes	250 g	3-4	3	Weigh the peeled potatoes and cut them into similar sized halves or quarters.
	500 g	6-7		
Turnip cabbage	250 g	4½-5	3	Cut turnip cabbage into small cubes.



REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.

Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

Arranging and covering

Avoid reheating large items such as joint of meat - they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring

Some foods can be reheated using 900 W power while others should be reheated using 600 W, 450 W or even 300 W.

Check the tables for guidance. In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).

Stir well or turn food over during reheating for best results. When possible, stir again before serving.

Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food.

It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken - for future reference.

Always make sure that the reheated food is piping hot throughout.

Allow food to stand for a short time after reheating - to let the temperature even out.

The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.

Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

REHEATING BABY FOOD

BABY FOOD: Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

BABY MILK: Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: about 37 °C.

REMARK: Baby food particularly needs to be checked carefully before serving to prevent burns.

Use the power levels and times in the next table as a guide lines for reheating.



Reheating Baby Food and Milk

Use the power levels and times in this table as guide lines for reheating.

Food	Portion	Power	Time	Standing time (min.)	Instructions
Baby food (vegetables + meat)	190 g	600 W	30 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby porridge (grain + milk + fruit)	190 g	600 W	20 sec.	2-3	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Stand for 2-3 minutes. Before serving, stir well and check the temperature carefully.
Baby milk	100 ml	300 W	30-40 sec.	2-3	Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turn-table. Cook uncovered. Shake well and stand for at least 3 minutes. Before serving, shake well and check the temperature carefully.
	200 ml		1 min. to 1 min. 10 sec.		

Reheating Liquids and Food

Use the power levels and times in this table as a guide lines for reheating.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Drinks (coffee, milk, tea, water with room temperature)	150 ml (1 cup)	900 W	1-1½	1-2	Pour into cups and reheat uncovered: 1 cup in the centre, 2 cups opposite of each other, 3 cups in a circle. Keep in microwave oven during standing time and stir well.
	300 ml (2 cups)		1½-2		
	450 ml (3 cups)		2½-3		
	600 ml (4 cups)		3-3½		
Soup (chilled)	250 g	900 W	2-2½	2-3	Pour into a deep ceramic plate or deep ceramic bowl. Cover with plastic lid. Stir well after reheating. Stir again before serving.
	350 g		2½-3		
	450 g		3-3½		
	550 g		3½-4		
Stew (chilled)	350 g	600 W	4½-5½	2-3	Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Pasta with sauce (chilled)	350 g	600 W	3½-4½	3	Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving.



Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Filled pasta with sauce (chilled)	350 g	600 W	4-5	3	Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.
Plated meal (chilled)	350 g	600 W	4½-5½	3	Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film.
	450 g		5-6		
	550 g		5½-6½		

Guide for Dual Reheating

Use the power levels and times in this table as a guide lines for reheating.

Food	Portion	Power	Time (min.)	Standing time (min.)	Instructions
Soup (chilled)	2 x 250 g	900 W	3½-4½	2-3	Pour into two deep ceramic plates and cover. Put one plate directly on the turntable, other on the rack. Stir well after reheating. Stir again before serving.
	2 x 350 g		5-6		
Chicken curry & rice (chilled)	2 x 350 g	600 W	7-8½	3	Plate two meals of each 2 chilled components on two ceramic plates dishes. Cover with microwave clingfilm. Put one plate directly on the turn table, other on the rack.

Plate meal (chilled)	2 x 350 g	600 W	7½-9	3	Plate two meals of 2-3 chilled components on two flat ceramic plates. Cover with microwave clingfilm. Put one plate directly on the turntable, other on the rack.
----------------------	-----------	-------	------	---	---

MANUAL DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible.

Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting.

The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint : Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

All frozen food should be defrosted using defrosting power level (180 W).

Food	Portion	Time (min.)	Standing time (min.)	Instructions
Meat				
Minced beef	200 g	6-7	15-30	Place the meat on a flat ceramic plate. Shield thinner edges with aluminium foil. Turn over after half of defrosting time!
	400 g	10-12		
Pork steaks	250 g	7-8		
Poultry				
Chicken pieces	500 g (2 pcs)	14-15	15-60	First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time!
Whole chicken	1200 g	32-34		
Fish				
Fish fillets	200 g 400 g	6-7 11-13	10-25	Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends with aluminium foil. Turn over after half of defrosting time!
Fruits				
Berries	250 g	6-7	5-10	Distribute fruits on a flat, round glass dish (with a large diameter).
Bread				
Bread rolls (each about 50 g)	2 pcs 4 pcs	1-1½ 2½-3	5-20	Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time!
Toast/sandwich	250 g	4-4½		
German bread (wheat + rye flour)	500 g	7-9		

GRILL

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 4 minutes will make the food brown more quickly.

Cookware for grilling:

Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

Food suitable for grilling:

Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

Important remark:

Whenever the grill only mode is used, make sure that the grill-heating element is under the ceiling in the horizontal position and not on the back-wall in the vertical position. Please remember that food must be placed on the high rack, unless another instruction is recommended.

MICROWAVE + GRILL

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly.

Three combination modes are available with this model:
600 W + Grill, 450 W + Grill and 300 W + Grill.

Cookware for cooking with microwave + grill

Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for microwave + grill cooking:

Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

Important remark:

Whenever the combination mode (microwave + grill) is used, make sure that the grill heating element is under the ceiling in the horizontal position and not on the back-wall in the vertical position. The food should be placed on the high rack, unless another instruction is recommended. Otherwise it has to be placed directly on the turntable. Please refer to the instructions in the following chart.

The food must be turned over, if it is to be browned on both sides.



Grill Guide for Frozen Food

Use the power levels and times in this table as guide lines for grilling.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Bread rolls (each about 50 g)	2 pcs 4 pcs	MW+ Grill	300 W+ Grill 1½-2 2½-3	Grill only 2-3 2-3	Arrange rolls in a circle on rack. Grill the second side of the rolls up to the crisp you prefer. Stand for 2-5 minutes.
Baguettes/ Garlic bread	200-250 g (1pc)	MW+ Grill	450 W+ Grill 3½-4	Grill only 2-3	Put frozen baguette diagonally on baking paper on the rack. After grilling stand for 2-3 minutes.
Gratin (vegetables or potatoes)	400 g	450 W + Grill	13-15	-	Put frozen gratin into a small glass pyrex dish. Put the dish on the rack. After cooking stand for 2-3 minutes.
Pasta (cannelloni, macaroni, lasagne)	400 g	600 W + Grill	14-16	-	Put frozen pasta into a small flat rectangular glass pyrex dish. Put the dish directly on the turntable. After cooking stand for 2-3 minutes.
Fish gratin	400 g	450 W + Grill	16-18	-	Put frozen fish gratin into a small flat rectangular glass pyrex dish. Put the dish directly on the turntable. After cooking stand for 2-3 minutes.

Grill Guide for Fresh Food

Preheat the grill with the grill-function for 4 minutes.

Use the power levels and times in this table as guide lines for grilling.

Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Toast slices	4 pcs (each 25 g)	Grill only	3½-4½	3-4	Put the toast slices side by side on the rack.
Bread rolls (already baked)	2-4 pieces	Grill only	2½-3½	1½-2½	Put bread rolls first with the bottom side up in a circle directly on the turntable.
Grilled tomatoes	200 g (2 pcs) 400 g (4 pcs)	300 W + Grill	3½-4½ 5-6	-	Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the rack.
Tomato-cheese toast	4 pcs (300 g)	300 W + Grill	4-5	-	Toast the bread slices first. Put the toast with topping on the rack. Stand for 2-3 minutes.
Toast hawaii (pineapple, ham, cheese slices)	2 pcs (300 g) 4 pcs (600 g)	450 W + Grill	3½-4 6-7	-	Toast the bread slices first. Put the toast with topping on the rack. Put 2 toasts opposite directly on the rack. Stand for 2-3 minutes.
Baked potatoes	250 g 500 g	600 W + Grill	4½-5½ 6½-7½	-	Cut potatoes into halves. Put them in a circle on the rack with the cut side to the grill.
Gratin potatoes/ Vegetables (chilled)	500 g	450 W + Grill	9-11	-	Put the fresh gratin into a small glass pyrex dish. Put the dish on the rack. After cooking stand for 2-3 minutes.



Fresh food	Portion	Power	1st side time (min.)	2nd side time (min.)	Instructions
Chicken pieces	450 g (2 pcs)	300 W + Grill	7-8	7-8	Brush chicken pieces with oil and spices. Put them in a circle with the bones to the middle. Put one chicken piece not into the centre of the rack. Stand for 2-3 minutes.
	650 g (2-3 pcs)		9-10	8-9	
	850 g (4 pcs)		11-12	9-10	
Roast chicken	900 g 1100 g	450 W + Grill	10-12 12-14	9-11 11-13	Brush chicken with oil and spices. Put chicken first breast side down, second side breast side up directly on turntable. Stand for 5 minutes after grilling.
Lamb chops (medium)	400 g (4 pcs)	Grill only	10-12	8-9	Brush the lamb chops with oil and spices. Lay them in a circle on the rack. After grilling stand for 2-3 minutes.
Pork steaks	250 g (2 pcs)	MW + Grill	300 W + Grill 6-7	Grill only 5-6	Brush the pork steaks with oil and spices. Lay them in a circle on the rack. After grilling stand for 2-3 minutes.
	500 g (4 pcs)		8-10	7-8	
Roast fish	450 g	300 W + Grill	6-7	7-8	Brush skin of whole fish with oil and herbs and spices. Put fish side by side (head to tail) on rack.
	650 g		7-8	8-9	
Baked apples	2 apple (ca. 400 g)	300 W + Grill	6-7	-	Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the turntable.
	4 apples (ca. 800 g)		10-12		

SPECIAL HINTS

MELTING BUTTER

Put 50 g butter into a small deep glass dish. Cover with plastic lid. Heat for 30-40 seconds using 900 W, until butter is melted.

MELTING CHOCOLATE

Put 100 g chocolate into a small deep glass dish. Heat for 3-5 minutes, using 450 W until chocolate is melted. Stir once or twice during melting. Use oven gloves while taking out!

MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish. Heat for 20-30 seconds using 300 W, until honey is melted.

MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water. Put drained gelatine into a small glass pyrex bowl. Heat for 1 minute using 300 W. Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water. Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 900 W, until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well. Cook covered for 10-12 minutes using 900 W. Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

COOKING PUDDING

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 900 W. Stir several times well during cooking.

BROWNING ALMOND SLICES

Spread 30 g sliced almonds evenly on a medium sized ceramic plate. Stir several times during browning for 3½ to 4½ minutes using 600 W. Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!



CLEANING YOUR MICROWAVE OVEN

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings

 **ALWAYS** ensure that the door seals are clean and the door closes properly.

 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the of the appliance and possibly result in a hazardous situation.


1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

 **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

 **Clean the** microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it.



STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair.

 **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

 If you wish to store your oven away temporarily, choose a dry, dust-free place.

Reason : Dust and damp may adversely affect the working parts in the oven.

 This microwave oven is not intended for commercial use.



TECHNICAL SPECIFICATIONS

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	GS109F
Power source	230 V ~ 50 Hz
Power consumption	
Microwave	1400 W
Grill	1300 W
Combined mode	2700 W
Output power	100 W / 900 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75P(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D)	
Outside	512 x 297 x 435 mm
Oven cavity	336 x 241 x 349 mm
Volume	28 liter
Weight	
Net	16 kg approx



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300-362-603	www.samsung.com
NEW ZEALAND	0800-SAMSUNG (0800-726-786)	
CHINA	400-810-5858	
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	3030-8282 1800-3000-8282	
INDONESIA	0800-112-8888 021-5699-7777	www.samsung.com
JAPAN	0120-327-527	
MALAYSIA	1800-88-9999	
PHILIPPINES	1-800-10-SAMSUNG (726-7864) 1-800-3-SAMSUNG (726-7864) 1-800-8-SAMSUNG (726-7864) 02-5805777	
SINGAPORE	1800-SAMSUNG(726-7864)	
THAILAND	1800-29-3232 02-689-3232	
TAIWAN	0800-329-999	
VIETNAM	1-800-588-888	